

Cuisinart™

INSTRUCTION BOOKLET



Salt, Pepper and Spice Mill

SG-3C

For your safety and continued enjoyment of this product, always read the instruction book carefully before using.

IMPORTANT SAFEGUARDS

When using an electrical appliance, basic safety precautions should always be followed, including the following:

1. **READ ALL INSTRUCTIONS.**
2. To protect against electrical shock, do not put the charger base or motor body of this appliance in water or other liquid. Never submerge any other portion of this unit. If any part falls into liquid, remove immediately. Carefully remove, clean and dry unit thoroughly before continuing.
3. Do not operate in the presence of explosive and/or flammable fumes.
4. Unplug charger base from outlet before cleaning.
5. Charger base should be plugged into an electrical outlet away from sink or hot surfaces.
6. Do not use an extension cord. Plug charger base adapter directly into an electrical outlet.
7. Do not use appliance for other than intended use.
8. **Do not operate any appliance with a damaged cord or plug, or after the appliance has malfunctioned or has been dropped or damaged in any way, or is not operating properly. Return the appliance to the nearest Cuisinart Repair Center for examination, repair, or mechanical or electrical adjustment.**
9. The use of attachments or accessories not recommended by Cuisinart may cause fire, electrical shock or risk of injury.
10. This appliance is intended for household use only and not for commercial or industrial use.
11. Do not operate a damaged charger. Have damaged charger replaced immediately.
12. Use only with the charger provided with the appliance. Do not attempt to use this charger with any other product. Likewise, do not attempt to charge this appliance with any other charger.
13. **Do not incinerate the mill, even if it is damaged. Severe injury can occur if the batteries are placed in a fire.**
14. This product contains, nickel-metal hydride (NiMH) batteries, which must be recycled at the end of the life of the product and disposed of properly. (See Disposal/ Recycling of Batteries, page 6.) **Do not incinerate or compost batteries, as risk of severe injury can occur at high temperatures.**
15. Leaks from battery cells can occur under extreme conditions. If the liquid, which is a 20–35% solution of potassium hydroxide, gets on the skin, (1) wash quickly with soap and water or (2) neutralize with a mild acid such as lemon juice or vinegar. If the liquid gets into eyes, flush them immediately with clean water for a minimum of 10 minutes. Seek medical attention.
16. Close supervision is necessary when any appliance is used by or near children.
17. Avoid contacting moving parts.
18. Do not use outdoors.
19. Do not let cord hang over edge of table or counter.
20. Do not operate your appliance in an appliance garage or under a wall cabinet. **When storing in an appliance garage always unplug the unit from the electrical outlet.** Not doing so could create a risk of fire, especially if the appliance touches the walls of the garage or the door touches the unit as it closes.

SAVE THESE INSTRUCTIONS FOR HOUSEHOLD USE ONLY

CONTENTS

Important Safeguards	2
Parts and Features	3
Assembly	4
Operation	5
Quick Tips	6

Charging & Battery Life	6
Cleaning and Maintenance	6
Disposal/Recycling of Batteries	6
Warranty	7

PARTS AND FEATURES

- Measuring Cap**
1 teaspoon (5 ml) capacity
- Removable Grinding Containers**
Clear for easy viewing, and hold large portions for less refills
- Rechargeable Batteries (Not Shown)**
- Comfort Grip Housing**
Ergonomically designed for comfort and ease of use
- On/Off Button**
Operates mill when pressed
- Charging Base**
Plugs into outlet and brings unit to full recharge
- Spice Catcher**
Removable tray easily discards leftover spices
- Charge/Ready Light**
Illuminates red when charging and blue when fully charged.
- Adjustable Grind Dial**
Choose from 5 set positions from coarse to fine
- Grind Directional Arrows**
Indicates which direction to turn the adjustable grind dial for desired setting
- Cord Storage (not shown)**
- BPA Free (not shown)**
All materials that come in contact with food are BPA free.




ASSEMBLY


To assemble your Cuisinart™ Salt, Pepper and Spice Mill for use:

1. Place housing and all removable parts on a clean, flat surface. Make sure that all parts have been cleaned and dried thoroughly before assembling.

 2. Attach grinding container(s) to the unit housing. **NOTE:** It is best to attach the grinding container from the bottom while holding the unit upright. See fig.1.

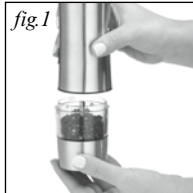

 3. Line up the arrow on the grinding container with the arrow on the unit housing. **NOTE:** Both arrows should face each other. This will indicate the grinding container and unit are properly aligned. See fig.2.

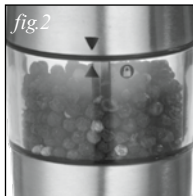


4. Gently push the grinding container and unit housing together. The grinding container will fit together comfortably with the unit housing. See fig.3.



5. Secure the grinding container in place by twisting the grinding container clockwise so that the arrow on the unit housing is now aligned with the lock symbol on the grinding container. **NOTE:** The two pieces will click together indicating proper assembly. See fig.4.



 6. To attach the second grinding container, flip the unit housing over and repeat

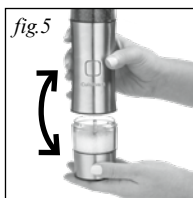

assembly instructions. See fig.5.

7. Your Cuisinart™ Salt, Pepper and Spice Mill is now assembled. See fig.6.



For use with measuring cap:

1. To use the measuring cap on either grinding container, grasp the measuring cap and connect to grinding container by aligning the grooves on the measuring cap with the ridges in the grinding container. See fig.7.



 
2. Press together until the ridge of the measuring cap rests flat against the grinding container. **NOTE:** When not in use, the measuring cap should remain in the uppermost grinding container, as the unit housing will not fit into the charging base if the measuring cap is on the lower container.

To assemble charging base for use:

1. Place housing, charging base and all removable parts on a clean, flat surface. Make sure that all parts have been cleaned and dried thoroughly before assembling.



2. Place the removable spice catcher into the charging base so that it fits securely. **NOTE:** The spice catcher will only fit into the charging base one way. See fig.8.

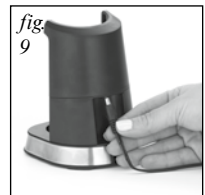

3. Connect power adapter to the charging base by grasping the pin on the power adapter and inserting it vertically into the back of the charging base until secure. **NOTE:** Do not insert power adapter into the charging base while power adapter is plugged into a power source. See fig.9.

CHARGING INSTRUCTIONS

 
To charge your Cuisinart™ Salt, Pepper and Spice Mill for use:

1. Follow **assembly instructions** for the Cuisinart™ Salt, Pepper and Spice Mill and charging base on page 4 to properly assemble for charging.


2. Grasp assembled unit securely and make sure it is facing upright. The Salt, Pepper and Spice Mill is facing upright when the Cuisinart™ logo on the front of the unit is in proper reading orientation (easy to read and horizontal.) See fig.10.



3. Place the fully assembled Salt, Pepper and Spice Mill in the charging base so that the recessed area on the back of the unit housing fits comfortably with the protrusion on the charging base. See fig.11.

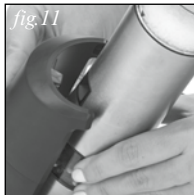

 4. Plug charging base into a 120v power outlet. Your unit is now charging for use. **NOTE:** Unit is properly charging if red LED illuminates from charging base. See fig.12.

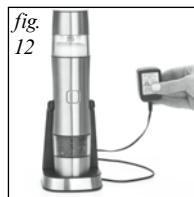

3. Line up the arrow on the grinding container with the arrow on the unit housing. **NOTE:** Both arrows should face each other. This will indicate the grinding container and unit are properly aligned.
4. Gently push the grinding container and unit housing together. The grinding container will fit together comfortably with the unit housing.
5. Twist the grinding container clockwise so that the arrow on the unit housing is now aligned with the lock symbol on the grinding container. **NOTE:** The two pieces will click together indicating proper assembly.
6. To attach the second grinding container, flip the unit housing over and repeat operating instructions.
7. Press the On/Off button in the center of the unit housing to begin grinding. **NOTE:** Only the bottom container will yield any grinding results. Even though the grinding container facing upward will rotate, no grinding will actually take place.

For use with measuring cap:

To use the measuring cap on either grinding container, grasp the measuring cap and connect to grinding container by aligning the grooves on the measuring cap with the ridges in the grinding container. Press together until the ridge of the measuring cap rests flat against the grinding container. **NOTE:** **The measuring cap can be used on either container during operation only.** When not in use, the measuring cap should remain in the uppermost grinding container as the unit housing will not fit into the charging base if the measuring cap is on the lower container.

OPERATION INSTRUCTIONS

1. Place housing and all removable parts on a clean, flat surface. Make sure that all parts have been cleaned and dried thoroughly and properly assembled before use.
2. Attach grinding container(s) to the unit housing with sea salt, peppercorns, or

ADJUSTING THE GRIND

To adjust the grind from fine to coarse, use the adjustment dial on the underside of the mill. Clockwise for a finer grind and counterclockwise for a coarser grind.



QUICK TIPS

- Before first use, the batteries must be charged for 13 hours.
- To clear a peppercorn that is stuck in the grinding wheel you may either:
 1. Turn the mill upside down and shake gently while pressing the On/Off power button.
 2. Turn the mill upside down and position the grind selector to coarse, then hold over a plate and grind until peppercorn is dislodged.
- Never use moist or wet spices in the mill. This will clog the grinding mechanism. We recommend using only store-bought dried spices.
- To improve battery performance, it is recommended that you occasionally unplug the charging base and run the mill until its battery is fully discharged and it stops operating. Once discharged, plug the charging base back into the electrical outlet and recharge the mill for 13 hours. This procedure improves battery capacity and should be repeated every 2–3 months.
- Clean the mill and base by simply wiping all parts with a damp cloth and thoroughly drying. Do not place in the dishwasher. Avoid wetting battery contacts.

CHARGING & BATTERY LIFE

Your Cuisinart™ Salt, Pepper and Spice Mill is equipped with NiMH batteries. We have selected these batteries to give you maximum battery life and long running times.

If batteries should run down completely, it will take between 8 and 13 hours to fully recharge them. Normally, you won't run batteries down completely, since the running time with a full charge is up to 20 minutes. It varies depending on your usage, but most grinding tasks take only about 5 seconds. If your battery is no longer charging, it is time to replace the battery. Please call our Consumer Service Center at 1-800-472-7606 for instructions on returning your unit for battery replacement.

CONTINUOUS CHARGING

The unit is designed so that the batteries may remain on continuous charge. It is recommended that the Salt, Pepper and Spice Mill charger be kept plugged into a wall socket, so that the mill will always be ready to use. Leaving the unit on continuous charge is inexpensive in terms of the amount of electricity being used.

Use only with the charger provided with the appliance. Do not attempt to use this charger with any other product. Likewise, do not attempt to charge this appliance with any other charger.

HOLDING THE CHARGE

The batteries hold most of their charge even when not plugged in and charging, losing only about 30% of total charge per month.

SHORT RUN TIMES

If, after repeated use, the run time seems to get shorter and the Salt, Pepper and Spice Mill has less power, remove the plug from the wall outlet and continue to use mill until it is fully discharged and stops operating. Plug base back into wall outlet and recharge the unit for 13 hours or overnight for a full new charge. This procedure improves battery capacity and should be repeated once every 2–3 months to ensure optimum performance.

CLEANING AND MAINTENANCE

Simply wipe all parts with a damp cloth then dry thoroughly. Do not place in the dishwasher. Avoid wetting battery contacts. Any other servicing should be performed by an authorized service representative.

DISPOSAL/RECYCLING OF BATTERIES

This product uses four NiMH rechargeable and recyclable batteries. At the end of the batteries' useful life, they should be recycled. These batteries must not be incinerated or composted.

NiMH batteries should not be put in municipal waste systems. Contact your local waste collection agency for proper recycling and disposal information for your area.

Please do not attempt to dismantle the mill to replace these batteries on your own. Damage could result to the unit.

When it is time to replace and/or recycle the batteries, or to receive additional instructions for disposing of old batteries, call toll-free 1-800-472-7606 for instructions on how to ship your Salt, Pepper and Spice Mill back to Cuisinart. Or send the Salt, Pepper and Spice Mill to: Cuisinart, 100 Conair Parkway, Woodbridge, Ontario L4H 0L2.

WARRANTY

LIMITED THREE-YEAR WARRANTY

We warrant that this Cuisinart product will be free of defects in materials or workmanship under normal home use for 3 years from the date of original purchase. This warranty covers manufacturer's defects including mechanical and electrical defects. It does not cover damage from consumer abuse, unauthorized repairs or modifications, theft, misuse, or damage due to transportation or environmental conditions. Products with removed or altered identification numbers will not be covered.

This warranty is not available to retailers or other commercial purchasers or owners. If your Cuisinart product should prove to be defective within the warranty period, we will repair it or replace it if necessary. For warranty purposes, please register your product online at www.cuisinart.ca to facilitate verification of the date of original purchase and keep your original receipt for the duration of the limited warranty. This warranty excludes damage caused by accident, misuse or abuse, including damage caused by overheating, and it does not apply to scratches, stains, discolouration or other damage to external or internal surfaces that does not impair the functional utility of the product. This warranty also expressly excludes all incidental or consequential damages.

Your Cuisinart product has been manufactured to the strictest specifications and has been designed for use only in 120 volt outlets and only with authorized accessories and replacement parts. This warranty expressly excludes any defects or damages caused by attempted use of this unit with a converter, as well as use with accessories, replacement parts or repair service other than those authorized by

Cuisinart. If the appliance should become defective within the warranty period, do not return the appliance to the store. Please contact our Customer Service Centre:

Toll-free phone number:

1-800-472-7606

Address:

Cuisinart Canada
100 Conair Parkway
Woodbridge, Ont. L4H 0L2

Email:

consumer_Canada@conair.com

Model:

SG-3C

To facilitate the speed and accuracy of your return, please enclose:

- \$10.00 for shipping and handling of the product (cheque or money order)
- Return address and phone number
- Description of the product defect
- Product date code*/copy of original proof of purchase
- Any other information pertinent to the product's return

* Product date code can be found on the underside of the base of the product. Date code: WWYY, representing week, and year. eg.5018 = manufactured in 50th week of the year 2018

Note: We recommend you use a traceable, insured delivery service for added protection. Cuisinart will

not be held responsible for in-transit damage or for packages that are not delivered to us.

To order replacement parts or accessories, call our Customer Service Centre at 1-800-472-7606. For more information, please visit our website at www.cuisinart.ca.

Cuisinart™



Food
Processors



Juicers



Coffeemakers



Cookware



Tools and
Gadgets

Cuisinart™ offers an extensive assortment of top quality products to make life in the kitchen easier than ever. Try some of our other countertop appliances and cookware, and Savour the Good Life®.

www.cuisinart.ca

©2019 Cuisinart Canada
100 Conair Parkway,
Woodbridge, Ontario L4H 0L2

Consumer Call Centre E-mail:
Consumer_Canada@Conair.com

Printed in China

19CC034600

Trademarks or service marks of third parties used herein are the trademarks or service marks of their respective owners.

IB-12261-CAN