

## ■ CLEANING AND MAINTENANCE INSTRUCTIONS

Treating your scale with care will ensure proper use and years of excellent service. Wipe down the scale surface and touchpad buttons with a damp cloth. Do not put any water or dishwashing soap directly over the electronic parts of the scale as this may cause the scale to malfunction or weigh ingredients improperly. Stainless steel cover is dishwasher safe. Display your scale on the countertop along with your other Cuisinart® products, store in a cabinet, or on a kitchen shelf.

## ■ ESSENTIAL PRECAUTIONS

1. Do not immerse in water or place under running tap water.
2. Do not put hot objects on scale.
3. Do not use abrasive cleaners.
4. Do not store anything on scale.

### 3-YEAR LIMITED WARRANTY

We warrant that this Cuisinart product will be free of defects in material or workmanship under normal home use for 3 years from the date of original purchase.

This warranty covers manufacturer's defects including mechanical and electrical defects. It does not cover damage from consumer abuse, unauthorized repairs or modifications, theft, misuse, or damage due to transportation or environmental conditions. Products with removed or altered identification numbers will not be covered.

This warranty is not available to retailers or other commercial purchasers or owners.

If your Cuisinart scale should prove to be defective within the warranty period, we will repair it or replace it if necessary.

For warranty purposes, please register your product online at [www.cuisinart.ca](http://www.cuisinart.ca) to facilitate verification of the date of original purchase or keep your original receipt for the duration of the limited warranty.

If the scale should become defective within the warranty period, **do not return the scale to the store.** Please contact our Customer Service Centre:

**Toll-free phone number:** 1-800-472-7606  
**Address:** Cuisinart Canada  
100 Conair Parkway  
Woodbridge, Ont. L4H 0L2  
**Email:** Consumer\_Canada@Conair.com

To facilitate the speed and accuracy of your return, please enclose:

- \$10.00 for shipping and handling of the product (cheque or money order)
- Return address and phone number
- Description of the product defect
- Product date code\*/copy of original proof of purchase
- Any other information pertinent to the product's return

\* Product date code can be found on the underside of the base of the product. The product date code is a 4 or 5 digit number. Example, 90630 would designate year, month & day (2009, June 30th).

Note: We recommend you use a traceable, insured delivery service for added protection. Cuisinart will not be held responsible for in-transit damage or for packages that are not delivered to us.

To order replacement parts or accessories, call our Customer Service Centre at 1-800-472-7606.

For more information, please visit our website at [www.cuisinart.ca](http://www.cuisinart.ca)

©2009 Cuisinart®

Cuisinart® is a registered trademark of Cuisinart,  
100 Conair Parkway, Woodbridge, Ont. L4H 0L2  
Printed in China 08CC019

\*Any trademarks or service marks of third parties used herein are the trademarks or service marks of their respective owners.

U IB-8141A-CAN

# Cuisinart® Kitchen Scales



## Kitchen Scales

## Use and Care Guide

Weighing is the quickest and most accurate way to measure most dry and solid ingredients such as sugar, flour and shortening for consistently reliable results. With your new Cuisinart® Kitchen Scale, weighing is simple and easy. Designed to meet all your household measuring needs, your scale will provide precise, consistent weighing of cooking/baking ingredients for the best results. Use your scale to weigh food portions specified in your dieting guides. You can even weigh oversized letters and packages to ensure you have the right amount of postage.

The Cuisinart® Kitchen Scale is compact, light and convenient to store. Operation and cleanup are fast and easy. It weighs in 1/8 ounce increments up to a maximum of 11 pounds (5 kg). This scale converts from ounces to grams at the touch of a button and weighs in gram increments up to a maximum of 5 kg.

## ■ OPERATING INSTRUCTIONS


Remove any labels or clear protective films from the scale before first use.

### INSTALLING THE BATTERY

Your scale includes either a 3-volt lithium battery or 2 AAA batteries. Insert batteries into the battery compartment situated underneath the scale.

**NOTE:** When “Lo” appears on the display screen, the batteries must be replaced.

### WEIGHING ITEMS

1. Place the scale on a level, hard surface.
- 2a. Choose whether you want to weigh directly on the platform or on the stainless cover.
- 2b. If weighing with the stainless cover place the cover on the scale before you turn the scale on.
3. Press the  button to turn the scale on. “8888” first appears on the display followed by “0” g, indicating the scale is ready for use.
4. Place the object/food item to be weighed on the platform and read the weight on the jumbo LCD screen.

**NOTES:** Weights are displayed in 1 g increments. The scale will read up to 5.2kg, after which E is displayed on the left hand side of the screen followed by 3 dashes (E---). If 3 dashes appear followed by E from left to right (---E) this means the scale is overloaded. Do not touch any parts of the scale with your hands while weighing is in progress. The scale is very sensitive and may pick up extra readings.

### CHANGING MODES


To change from metric (kg/g) to imperial (lbs/oz) mode at anytime during use press the MODE/TARE button once.

## ■ TARE FUNCTION

### WEIGHING WITH A BOWL


You may want to weigh ingredients in a bowl or other container. The tare option offsets the weight of the bowl so that you are only

weighing the ingredient. If you remove the bowl from the scale, a minus weight (weight of bowl) appears in the display.

1. Place a bowl on the scale platform.
2. Press the  button on the front panel. At first “8888” will appear. Wait until “0” appears on the display screen.
3. To tare, press and hold the MODE/TARE button for two seconds. “0” will appear. Place the ingredient into the bowl. The weight of the added ingredient appears.

 
## ADD AND WEIGH FEATURE

If you want to reach a desired weight (i.e., 300g flour) – you can use the add and weigh procedure.

1. Place your scale on a stable, level surface.
2. Press the  button. Wait until “0” appears on the display.
3. Place an empty bowl to hold the ingredients on the scale.
4. Zero out the weight of the empty bowl by pressing and holding the MODE/TARE button for 2 seconds. Wait until “0” appears on the scale. This will ensure that the weight of the empty bowl is subtracted from the total weight of the bowl and ingredients.
5. You are now ready to weigh your first ingredient. Place the ingredient into the bowl until the desired weight appears on the display.
6. You are now ready to weigh the next ingredient(s). Place additional ingredient in the bowl until the desired weight appears on the display.



 

**NOTE:** If you want to view the weight of individual ingredients as they are added to the bowl, then tare each time you add a new ingredient.

## ■ AUTOMATIC SWITCH OFF

To conserve battery power, the scale automatically shuts off if left unused for approximately one minute. To turn the scale off manually press and hold the  button for two seconds.

## ■ DISPLAY MESSAGES

The Cuisinart® Kitchen Scale provides the following display messages to simplify operation.

	Displays when you switch the scale on. Wait until “0” appears to begin weighing.
	Displays when you reset the scale to zero while using the TARE function. Wait until “0” appears to begin weighing. Displays when the scale is ready for use.
	Displays when scale is overloaded. Remove excess weight from the scale.
	Displays when scale is underloaded.