

# Cuisinart®

## INSTRUCTION BOOKLET



**Classic 4-Slice Toaster**

**CPT-340C Series**

For your safety and continued enjoyment of this product,  
always read the instruction book carefully before using.

---

# IMPORTANT SAFEGUARDS

When using an electrical appliance, basic safety precautions should always be followed, including the following:

1. **Read all instructions.**
2. **Always unplug from outlet when not in use and before cleaning. Allow to cool before cleaning or handling.**
3. **Do not touch hot surfaces. Use handles or knobs.**
4. **To protect against electrical shock, do not place any part of the toaster in water or other liquid. See instructions for cleaning.**
5. **Close supervision is necessary when any appliance is used by or near children.**
6. Do not operate any appliance with a damaged cord or plug, or after the appliance has malfunctioned or has been dropped or damaged in any way, or if it is not operating properly. Return the toaster to the nearest Cuisinart Repair Center for examination, repair or mechanical or electrical adjustment.
7. The use of accessory attachments not recommended by Cuisinart may cause injury.
8. Do not use outdoors.
9. Do not let cord hang over the edge of the table or countertop or touch hot surfaces.
10. Do not place toaster on or near a hot gas or electric burner or in a heated oven.
11. Do not use this toaster for other than intended use.
12. **Oversize foods, metal foil packages or utensils must not be inserted in the toaster, as they may involve a risk of fire or electric shock.**
13. **A fire may occur if the toaster is covered or touching flammable materials, such as curtains, draperies or walls when in operation. Do not operate under wall cabinets.**
14. Do not attempt to dislodge food when the toaster is plugged into electrical outlet.
15. To avoid possibility of fire, do not leave toaster unattended during use.
16. To disconnect, push the cancel button, then remove plug from wall.
17. **WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, REPAIR SHOULD BE DONE ONLY BY AUTHORIZED PERSONNEL. NO USER SERVICEABLE PARTS ARE INSIDE.**
18. Do not operate your appliance in an appliance garage or under a wall cabinet. **When storing in an appliance garage always unplug the unit from the electrical outlet.** Not doing so could create a risk of fire, especially if the appliance touches the walls of the garage or the door touches the unit as it closes.

# SAVE THESE INSTRUCTIONS FOR HOUSEHOLD USE ONLY

## SPECIAL CORD SET INSTRUCTIONS

A short power-supply cord is provided to reduce the risks resulting from becoming entangled in or tripping over a longer cord. Longer extension cords are available and may be used if care is exercised in their use.

If a long extension cord is used, the marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance, and the longer cord should be arranged so that it will not drape over the countertop or table-top where it can be pulled on by children or tripped over unintentionally.

**NOTICE:** This appliance has a polarized plug (one blade is wider than the other).


As a safety feature to reduce the risk of electric shock, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

## TABLE OF CONTENTS

Important Safeguards .....	1
Features and Benefits.....	2
Use and Care.....	3
Cleaning and Maintenance.....	5
Warranty .....	6

## FEATURES AND BENEFITS

- 1. Dual Toasting Slots**  
Two sets of controls toast breads on different settings. Use controls and carriage lever on the left for slots 1 and 2 and controls and carriage lever on the right for slots 3 and 4.
- 2. Extra-Lift Carriage Control Lever**  
Brings the toast close to the top of the toaster, making it easy to remove the smallest items.
- 3. Browning Control**  
Sets desired toast color from light to dark, with six browning levels.
- 4. Bagel Button**  
Add extra time to toasting cycle. LED lights when selected.
- 5. Defrost Button**  
Defrosts and toasts frozen bread. LED lights when selected.
- 6. Reheat Button**  
Reheats without browning or toasting. LED lights when selected.
- 7. Cancel Button**  
Interrupts toasting process.
- 8. Slide-out Crumb Tray (not shown)**  
Pulls out to clean crumbs that collect in bottom of toaster.
- 9. Cord Storage (not shown)**  
Takes up excess cord and keeps countertop neat.
- 10. BPA Free (not shown)**  
All parts that come in contact with food are BPA free.

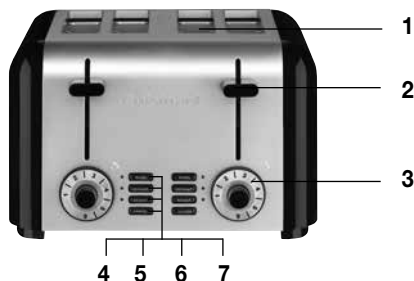

---

## USE AND CARE

Unwind the power cord. Check that the crumb tray is in place and that there is nothing in the toaster slot. Plug power cord into the wall outlet.

### 1. Insert Slice(s) of Bread

Be sure that multiple slices do not overlap and that the carriage is in the up position.

### 2. Set the Browning Control

Turn rotary dial to the desired position:

Dial Setting	Color
1-2	light
3-4	medium
5-6	dark

### Some notes on browning

Toasting is a combination of cooking and drying of the bread. Therefore, differences in moisture level from one bread to another can result in varying toasting times.

- For slightly dry bread, use a lower setting than you normally would.
- For very fresh bread or whole wheat bread, use a higher setting than normal.
- Breads with very uneven surfaces (such as English muffins) will require a higher toast setting.
- Thickly cut pieces of bread (including bagels) will take longer to toast, sometimes significantly longer, since more moisture must be evaporated from the bread before toasting can occur. Very thick pieces may require two cycles.
- When toasting raisin or other fruit breads, remove any loose raisins, etc. from the surface of the bread before placing into the toaster. This will help prevent fruit pieces from falling into the toaster or sticking on the guide wires in the slot.

- Before toasting bagels, slice each bagel into two equal halves.

### Single Slice Toasting

If you are toasting a single slice of bread, set the heat selector to a lighter setting than you normally would. The toaster is designed to heat the whole toasting chamber for two slices. By lowering the heat for a single slice, you won't over-toast.

**These breads and pastries should be warmed using the Defrost button**

**Frozen Waffles, Pancakes, French Toast and Frozen Bagels**

### Toaster pastries

Exercise caution with toaster pastries; the filling can become quite hot, long before the surface of the pastry becomes browned. Never leave toaster pastries unattended while toasting or warming.

### 3. To Begin Toasting

Press the carriage lever until it locks into the down position.

### 4. To Stop Toasting

When the toasting cycle is finished, the toast will be raised. If you wish to stop the cycle before it is finished, simply press the Cancel button.

### Tips

- Never force foods into the toasting slot. Foods should fit freely between the guide wires.
- Do not place buttered breads or pastries with fillings or frostings in the toaster, as this could create a fire hazard.
- Uneven toasting is usually due to bread slices of uneven thickness.
- After use, unplug your toaster from the electrical outlet.

---

## DEFROST BUTTON

The defrost feature is designed to first defrost and then toast the bread, which extends the toasting cycle slightly.

### 1. Insert slice(s) of bread

Be sure that multiple slices do not overlap and the carriage is in the up position.

### 2. Set the Browning Control.

#### Setting 1-2

For refrigerated breads and thinner frozen items such as frozen pancakes.

#### Setting 3-4

For toaster pastries, frozen waffles and (thin) French toast, and refrigerated bagels.

#### Setting 5-6

For thicker frozen items such as bagels, hand-cut bread and thick French toast.

### 3. Press the carriage control lever until it locks into position.

### 4. Press the Defrost button. Red LED indicates feature is activated.

#### To stop cycle

When the defrost cycle is complete, the toaster will raise the bread. If you wish to stop the cycle before it is finished, simply press the "Cancel" button to interrupt.

After use, unplug the toaster from the electrical outlet.

## REHEAT BUTTON

The reheat feature allows you to reheat bread without browning or toasting.

### 1. Insert slice(s) of bread.

Be sure that multiple slices do not overlap and the carriage is in the up position.

### 2. Press the carriage control lever until it locks into position.

### 3. Press the Reheat button. Red LED indicates feature is activated.

#### To stop cycle

When the reheat cycle is complete, the toaster will raise the bread. If you wish to stop the cycle before it is finished, simply press the Cancel button to interrupt.

## BAGEL BUTTON

The bagel feature adds extra time to the toasting cycle.

### 1. Insert slice(s) of bread or halved bagels.

Be sure that multiple slices do not overlap and the carriage is in the up position.

### 2. Press the carriage control lever until it locks into position.

### 3. Press the Bagel button. Red LED indicates feature is activated.

#### To stop cycle

When the bagel cycle is complete, the toaster will raise the bread. If you wish to stop the cycle before it is finished, simply press the cancel button to interrupt.

---

## **CLEANING AND MAINTENANCE**

Always allow the toaster to cool completely before cleaning.

1. Always unplug the toaster from the electrical outlet.
2. Do not use abrasive cleansers. Simply wipe the exterior with a clean damp cloth and dry thoroughly. Apply any cleansing agent to a cloth, not to the toaster, before cleaning.
3. To remove crumbs, slide out the crumb tray and discard crumbs. Wipe clean and replace. Never operate the toaster without the crumb tray in place.
4. To remove any pieces of bread remaining in the toaster, turn the toaster upside down and gently shake. Never insert any hard or sharp instruments into the slot, as this could damage the toaster and cause a safety hazard.
5. Never wrap the cord around the outside of the toaster. Use the cord storage cleats on the underside of the toaster.
6. Any other servicing should be performed by an authorized service representative.

---

# WARRANTY

## LIMITED THREE-YEAR WARRANTY

We warrant that this Cuisinart® product will be free of defects in materials or workmanship under normal home use for 3 years from the date of original purchase. This warranty covers manufacturer's defects including mechanical and electrical defects. It does not cover damage from consumer abuse, unauthorized repairs or modifications, theft, misuse, or damage due to transportation or environmental conditions. Products with removed or altered identification numbers will not be covered.

This warranty is not available to retailers or other commercial purchasers or owners. If your Cuisinart® product should prove to be defective within the warranty period, we will repair it or replace it if necessary. For warranty purposes, please register your product online at [www.cuisinart.ca](http://www.cuisinart.ca) to facilitate verification of the date of original purchase and keep your original receipt for the duration of the limited warranty. This warranty excludes damage caused by accident, misuse or abuse, including damage caused by overheating, and it does not apply to scratches, stains, discolouration or other damage to external or internal surfaces that does not impair the functional utility of the product. This warranty also expressly excludes all incidental or consequential damages.

Your Cuisinart product has been manufactured to the strictest specifications and has been designed for use only in 120 volt outlets and only with authorized accessories and replacement parts. This warranty expressly excludes any defects or damages caused by attempted use of this unit with a converter, as well as use with accessories, replacement parts or repair service other than those authorized by Cuisinart.

If the appliance should become defective within the warranty period, do not return the appliance to the store. Please contact our Customer Service Centre:

**Toll-free phone number:**

1-800-472-7606

**Address:**

Cuisinart Canada  
100 Conair Parkway  
Woodbridge, Ont. L4H 0L2

**Email:**

[consumer\\_Canada@conair.com](mailto:consumer_Canada@conair.com)

**Model:**

CPT-340C

To facilitate the speed and accuracy of your return, please enclose:

- \$10.00 for shipping and handling of the product (cheque or money order)
- Return address and phone number
- Description of the product defect
- Product date code\*/copy of original proof of purchase
- Any other information pertinent to the product's return

\* Product date code can be found on the underside of the base of the product. The product date code is a 4 or 5 digit number. Example, 90630 would designate year, month & day (2009, June 30th).

**Note:** We recommend you use a traceable, insured delivery service for added protection. Cuisinart will not be held responsible for in-transit damage or for packages that are not delivered to us.

To order replacement parts or accessories, call our Customer Service Centre at 1-800-472-7606. For more information, please visit our website at **[www.cuisinart.ca](http://www.cuisinart.ca)**.

# Cuisinart™



Coffeemakers



Blenders



Juicers



Cookware



Tools and

Cuisinart offers an extensive assortment of top quality products to make life in the kitchen easier than ever. Try some of our other countertop appliances and cookware, and Savor the Good Life®.

**[www.cuisinart.ca](http://www.cuisinart.ca)**

©2014 Cuisinart Canada

100 Conair Parkway,  
Woodbridge, Ontario L4H 0L2

Consumer Call Centre E-mail:  
Consumer\_Canada@Conair.com

Printed in China

14CC146902

Trademarks or service marks of third parties referred to herein are the trademarks or service marks of their respective owners.

IB-11729-CAN