

LIMITED LIFETIME WARRANTY

Your Cuisinart® Ovenware is warranted to be free of defects in material and workmanship under normal home use from the date of original purchase throughout the original purchaser's lifetime.

We recommend that you visit our website, www.cuisinart.ca for a fast, efficient way to complete your product registration. However, product registration does not eliminate the need for the consumer to maintain the original proof of purchase in order to obtain the warranty benefits.

If your ovenware should prove to be defective within your lifetime, we will repair it (or, if we think it necessary, replace it) without charge to you, except for shipping and handling. To obtain warranty service, please call our Consumer Service Centre toll-free at 1-800-472-7606, or write to Consumer Service Centre, Cuisinart, 100 Conair Parkway, Woodbridge, Ont. L4H 0L2.

E-mail: Consumer_Canada@Conair.com

To facilitate the speed and accuracy of your return, please enclose \$10.00 for shipping and handling of the product, along with proof of purchase. Please also be sure to include a return address, description of the product problem, phone number, and any other information pertinent to the product's return. Please pay by cheque or money order.

NOTE: For added protection and secure handling of any Cuisinart® product that is being returned, we recommend you use a traceable, insured delivery service. Cuisinart cannot be held responsible for in-transit damage or for packages that are not delivered to us. Lost and/or damaged products are not covered under warranty.

This warranty excludes damage caused by accident, misuse or abuse, including damage caused by overheating, and it does not apply to scratches, stains, discolouration, minor imperfections, slight colour variations or other damage to external or internal surfaces which does not impair the functional utility of the ovenware. This warranty also expressly excludes all incidental or consequential damages.

©2012 Cuisinart Canada
100 Conair Parkway, Woodbridge, Ont. L4H 0L2
Printed in China 12CC134523

*Any trademarks or service marks of third parties used herein are the trademarks or service marks of their respective owners.

Cuisinart®

Classic Collection® Ovenware



Non-Stick Roasters
Use and Care Guide

IB-10739-CAN

Cuisinart® Ovenware Non-Stick Roasters

Congratulations! Your new Cuisinart® Ovenware Non-Stick Roaster is designed from the inside out for today's lifestyles and combines uncompromising superior cooking performance with a professional look. We guarantee you a lifetime of healthier cooking with your new Cuisinart® roaster pan.

Heavy Steel Construction

High quality steel roaster pan heats quickly and evenly for optimal performance.

Versatile Performance

17 inch (43cm) roaster capacity fits in all standard-sized ovens. Oven safe to 400°F (204°C).

Non-Stick Interior and Exterior

Pan and rack provide a completely non-stick cooking surface, allow fats and oils to drain away and offer convenient cleanup.

Easy-Grip Handles

Roaster handles are professionally riveted for strength and durability. Wide grips ensure comfortable and secure lifting.



■ BEFORE USING FOR THE FIRST TIME

Remove all labels. Wash roaster and rack in warm water with a mild dish soap. Rinse thoroughly in warm water and wipe dry with a soft dishtowel.

■ HEALTHIER COOKING, EASY CLEANING

When cooking with your Cuisinart® Ovenware nonstick roaster, you do not need to add oil or butter to prevent foods from sticking. If you wish to enhance the flavour and appearance of foods, you need only add a minimum amount to the nonstick surface of your pan.

■ ESSENTIAL PRECAUTIONS

Never use Cuisinart® Ovenware under the broiler or in the microwave. We recommend using a low to medium setting for most cooking. Never leave Cuisinart® Ovenware or any pan empty over a hot burner. Doing so can ruin the pan and cause damage to the stovetop.

■ OVEN COOKING TEMPERATURE

Cuisinart® Ovenware can be used in the oven up to 400°F (204°C). Using Cuisinart® Ovenware in the oven will cause the handles as well as the pan to become hot. Use pot holders or oven mitts when removing the pan from the oven.

■ PROPER COOKING UTENSILS

We recommend using plastic or wooden utensils in your Cuisinart® Ovenware to maintain its appearance and performance. Refrain from cutting foods or using sharp utensils such as forks, knives, mashers or whisks that can scratch the cooking surface and the rack.

■ EASY MAINTENANCE

Let your Cuisinart® Ovenware cool before cleaning. The reinforced nonstick interior and exterior ensure easy cleaning. Pan and rack should be washed by hand with hot sudsy water and a sponge or soft dishcloth. Do not use steel wool or other metal or abrasive pads that can scratch the surface. After washing, rinse thoroughly and dry immediately. Do not put pan or rack in the dishwasher, since harsh detergents will harm exterior finish and may cause warping.

■ CLEANING THE EXTERIOR

Cuisinart® Ovenware has a smooth nonstick exterior finish, making it easier to clean and maintain. Food residue or buildup on the exterior of your pan can easily be removed with warm water and mild dish soap. The exterior of Cuisinart® Ovenware, like other brands, will show wear with continuous use. This condition will not in any way affect the superior cooking performance.

■ CONVENIENT STORAGE

Use care if you store your cookware in cabinets or drawers. Careless stacking and crowding may cause scratches.