

## Use and Care

Before first use, remove all labels and hang tags. Wash in warm soapy water, rinse and dry thoroughly.

### ▪ **Cooking**

**DO NOT USE ON STOVETOP BURNERS OR OTHER DIRECT HEAT SOURCES. DO NOT** exceed a maximum oven temperature of 500°F (260°C). When using under the broiler, allow 2.5" (6.5cm) beneath the heat source. Naturally, the handle as well as the bakeware will become hot after oven or microwave use. Use potholders to prevent burns. Do not put empty bakeware into the oven.

### ▪ **Freezer to Oven**

**DO NOT PLACE FROZEN BAKEWARE IN A PREHEATED OVEN.** Place frozen bakeware in cold oven; allow oven and bakeware to heat up together. (Put the stoneware in an unheated oven, turn on the oven, and allow both to come to desired cooking temperature simultaneously).

### ▪ **Cleaning**

**DO NOT** take a baker out of a hot oven or microwave and immerse in water; let the stoneware come to room temperature before washing. Never fully submerge the stoneware in a sink full of water, as stoneware absorbs water in places where there is no glaze. This can cause stress to the stoneware. For stubborn or baked on residue, fill the stoneware with hot water and let it soak, clean with soft brush or soft nylon or plastic scrubber. Do not use steel wool or other metal type abrasive cleaning pads. Dishwasher cleaning for everyday use.

## Limited 1-Year Warranty

Your Cuisinart® Classic Collection® Ceramic Bakeware is warranted to be free of defects in material and workmanship with normal home use for 1 year from the date of original purchase. We recommend that you visit our website, [www.cuisinart.ca](http://www.cuisinart.ca) for a fast, efficient way to complete your product registration. However, product registration does not eliminate the need for the consumer to maintain the original proof of purchase in order to obtain the warranty benefits.

If your bakeware should prove to be defective, we will repair it (or, if we think it necessary, replace it) without charge to you, except for shipping and handling. To obtain warranty service, please call our Consumer Service Centre toll-free at 1-800-472-7606. Or write to Consumer Service Centre, Cuisinart, 100 Conair Parkway, Woodbridge, Ontario, L4H 0L2. E-mail: [Consumer\\_Canada@Conair.com](mailto:Consumer_Canada@Conair.com)

To facilitate the speed and accuracy of your return, please enclose \$10.00 for shipping and handling of the product, along with proof of purchase. Please also be sure to include a return address, description of the product problem, phone number, and any other information pertinent to the product's return. Please pay by cheque or money order.

NOTE: For added protection and secure handling of any Cuisinart® product that is being returned, we recommend you use a traceable, insured delivery service. Cuisinart cannot be held responsible for in-transit damage or for packages that are not delivered to us. Lost and/or damaged products are not covered under warranty.

This warranty excludes damage caused by accident, misuse or abuse, including damage caused by overheating, and it does not apply to scratches, stains, discolouration, minor imperfections, slight colour variations or other damage to external or internal surfaces which does not impair the functional utility of the cookware. This warranty also expressly excludes all incidental or consequential damages.

©2012 Cuisinart Canada  
100 Conair Parkway  
Woodbridge, ON L4H 0L2

Any other trademarks or service marks of third parties referred to herein are the trademarks or service marks of their respective owners.