

Cuisinart®

EVOLUTION X™

C O R D L E S S



I N S T R U C T I O N
B O O K L E T

C O R D L E S S /
R E C H A R G E A B L E
4 - I N - O N E
W I N E C E N T E R

RWO-100C



For your safety and continued enjoyment of this product,
always read the instruction book carefully before using.

CONTENTS

Important Safeguards.....	2
Parts and Features	4
Before You Begin.....	5
Charging Your Appliance.....	5
Foil Cutter	5
To Operate Your Wine Opener	5
To Operate Your Wine Preserver.....	5
Date Indicators.....	6
To Open a Sealed Bottle.....	6
Cleaning and Maintenance.....	6
Warranty.....	7

IMPORTANT SAFEGUARDS

When using an electrical appliance, especially when children are present, basic safety precautions should always be taken, including the following:

WARNING: Read all safety warnings and instructions. Failure to follow the warnings and instructions may result in electric shock, fire and/or serious injury.

- 1. READ ALL INSTRUCTIONS.**
- To protect against electric shock, do not put the body of this EvolutionX™ Cordless Rechargeable 4-in-1 Wine Center in water or other liquids. This unit has not been designed for submersion in water or other liquids. If the wine opener body falls into liquid, remove immediately. Carefully remove, clean and dry unit thoroughly before continuing.
- This appliance is not intended for use by children or by persons with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge. Close supervision is necessary when any appliance is used near children. Children should be supervised to ensure that they do not play with the appliance.
- Do not operate in the presence of explosive and/or flammable fumes.
- To avoid the possibility of personal injury, always unplug the unit from the USB cable before cleaning.
- Illuminated lights indicate unit is ready to operate.
- Avoid contact with moving parts to reduce risk of injury to persons, and/or damage to the appliance.
- The USB power adapter and USB cable should be plugged into an electrical outlet away from sink or hot surface.
- Do not use an extension cord. Plug charger directly into an electrical outlet.
- Do not attempt to use this USB power adapter and USB cable with any other product. Also, do not attempt to charge the batteries with any other charger.
- Do not charge battery with charger plugged into an outdoor outlet.
- Do not operate any appliance with a damaged cord or plug, or after the appliance has malfunctioned or has been dropped or damaged in any way, or is not operating properly. Return the appliance to the nearest Cuisinart Repair Center for examination, repair, or mechanical or electrical adjustment.
- The use of attachments or accessories not recommended by Cuisinart may cause fire, electric shock or risk of injury.
- This appliance is intended for household use only and is not for commercial or outdoor use.
- Do not use this wine opener for other than its intended use of opening wines and preserving wines.
- Never force the wine opener onto a bottle or attempt to speed up the mechanism. The electric wine opener will work best when it is operated at its intended speed.
- Do not attempt to open the electric wine opener, the wine preserver or the base. They have no serviceable parts. Charge the appliance only by using the power cord supplied.
- To reduce the risk of fire or electric shock, do not operate any heating appliance beneath or near the mounted charging handle unit.
- Do not mount or store unit over or near a portion of a heating or cooking appliance, or a sink or washbasin.
- Unplug the USB power adapter from the outlet before attempting any routine cleaning of the charger.
- Do not operate a damaged USB power adapter. Have damaged USB power adapter replaced immediately.
- Do not incinerate the wine center, even if it is severely damaged. The batteries can explode in a fire.

-
23. This product contains a lithium ion battery which must be recycled at the end of the life of the wine center and disposed of properly. Do not incinerate or compost batteries, as they will explode at high temperature.
 24. Leaks from battery cells can occur under extreme conditions. If the liquid gets on the skin, (1) wash quickly with soap and water or (2) neutralize with mild acid such as lemon juice or vinegar. If the liquid gets into eyes, flush them immediately with clean water for a minimum of 10 minutes. Seek medical attention.
 25. Recharge only with the USB power adapter specified by the manufacturer. A USB power adapter that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.
 26. Use appliances only with specifically designated battery packs. Use of any other battery packs may create a risk of injury and fire.
 27. Under abusive conditions, liquid may be ejected from the battery. Avoid contact with such liquid. If contact accidentally occurs, flush with water. If liquid contacts eyes, seek medical help. Liquid ejected from the battery may cause irritation or burns.
 28. Do not use a battery pack or appliance that is damaged or modified. Damaged or modified batteries may exhibit unpredictable behavior resulting in fire, explosion or risk of injury.
 29. Do not expose a battery pack or appliance to fire or excessive heat. Exposure to fire or temperatures above 265°F/130°C may cause an explosion.
 30. Have servicing performed by a qualified repair person using only identical replacement parts. This will ensure that the safety of the product is maintained.
 31. Recommended ambient charging temperature: 50°F–104°F (10°C– 40°C).
 32. Recommended storage temperature: 50°F–104°F (10°C– 40°C).
 33. The USB power adapter must be listed Class 2 power supply or certified ITE power supply, rated output 5V 1A MAX. Do not use unapproved sources.
 34. Any other servicing should be performed by an authorized service representative.
 35. Do not operate your appliance in an appliance garage or under a wall cabinet. When storing in an appliance garage, always unplug the unit from the electrical outlet. Not doing so could create a risk of fire, especially if the appliance touches the walls of the garage or the door touches the unit as it closes.
 36. The maximum rating is based on the attachment that draws the greatest load (power or current) and that other recommended attachments may draw significantly less power or current.
 37. Do not place on or near a hot gas or electric burner or in a heated oven.
 38. Do not use outdoor.

SAVE THESE INSTRUCTIONS FOR HOUSEHOLD USE ONLY

PARTS AND FEATURES

1. Wine opener
2. Bottle stopper for preserving wine
3. Aerator
4. Foil cutter
5. Charging indicator lights (3)
6. Charging
 - a. USB power adapter (not shown)
 - b. USB cable (not shown)



BEFORE YOU BEGIN

Before using the EvolutionX™ Cordless Rechargeable 4-in-1 Wine Center for the first time, we recommend that you wipe the unit with a clean, damp cloth to remove any dirt or dust. Dry it thoroughly with a soft, absorbent cloth.

CHARGING YOUR WINE CENTER/BATTERY USE

The batteries in your EvolutionX™ Cordless Rechargeable 4-in-1 Wine Center have not been fully charged. Before the first use of this appliance, the batteries must be charged until the blue battery indicator light illuminates. With a full charge, your wine center will run for approximately 20 minutes, depending on load. Your wine center will be fully charged in approximately 2 hours.

Battery Life Indicator Lights: When the unit displays 3 blue power lights, you are between 100% and 75% of battery power. Two blue power lights: When illuminated, you are between 75% and 25% of battery power. One blue power light: When illuminated, you are at less than 25% and will need to charge soon.

NOTE: Do not leave your wine opener uncharged for an extended period of time, as it will affect the life of the rechargeable battery.

FOIL CUTTER

For your convenience, this unit has a foil cutter, which is stored in the base of the unit. Before removing the cork, you must remove any foil from the bottle. Attach foil cutter to the top of the wine bottle. Keep hand on lower part of the bottle and turn foil cutter with a twisting motion to cut into foil. Remove foil to expose top part of cork surface.

CAUTION: Blade on foil cutter is sharp. Please keep fingers away from cutter's sharp edges.

TO OPERATE YOUR WINE OPENER

Place the automatic wine opener on top of the wine bottle and apply pressure. The wine mechanism will begin to remove the cork from the bottle and will stop once the cork has been fully removed from the bottle and wine opener.

1. Place the wine opener on top of the wine bottle, making sure that it remains as straight/upright as possible at all times. If you hold

the automatic wine opener at an angle to the bottle, it will not remove the cork properly.

2. Hold the wine opener firmly and press down with the wine opener on top of the wine bottle. The corkscrew spiral will turn in a counterclockwise direction and enter the cork, then gradually remove it from the bottle. When the automatic mechanism has stopped, the cork has been fully removed from the bottle.
3. The cork, itself, will then automatically remove from the wine opener.

TO OPERATE YOUR WINE PRESERVER

1. Place the wine bottle on a flat surface.
2. Insert the bottle stopper into the wine bottle.
3. This is how the wine opener becomes a wine preserver. Hold the bottle stopper and wine bottle neck securely in one hand and place the wine opener on the bottle stopper.
4. Keep the wine preserver as straight as possible and in line with the wine bottle.
5. Push down on the bottle stopper. Apply pressure and the wine preserver will begin to work. It will automatically remove the air from the bottle while making a clacking noise.
6. The clacking noise will become slower and stop suddenly after approximately 20 seconds.
7. Do not release the pressure until the unit stops.
8. Remove the wine opener and stand it in the upright position until it is needed again.
9. After sealing the wine bottle, store bottle in the upright position, as wine may leak if it's on its side.

NOTE: During the above process, the wine opener may attach itself to the bottle stopper. In this case, hold the bottle stopper and the neck of the bottle securely in one hand and tilt the wine preserver away from the bottle stopper to break the suction. This should prevent air from re-entering the bottle. If in doubt, repeat the above operating process.

Suggestion: For more than half a bottle of wine remaining, one session should suffice. For less than half a bottle, we suggest you follow the steps above a second time.

TO OPERATE YOUR AERATOR

1. Hold your opened bottle of wine in one hand and place the aerator into the top of the bottle.
2. Push the aerator just below the rim of the wine bottle. Make sure it's stable.
3. Pour the liquid through the aerator which will enhance the aromas in your glass of wine.

DATE INDICATORS

1. Use the arrow symbol located on the bottle stoppers to indicate the date when the bottle was sealed with your wine preserver.
2. Gently swivel the silver ring to the left or right until the correct date is in line with it. Additional bottle stoppers can be ordered at cuisinart.ca.

TO OPEN A SEALED BOTTLE

- Firmly hold the bottle in one hand and gently ease the bottle stopper away from the bottle with the other hand.

RESET button operation

In case the corkscrew spiral gets jammed inside the cork (either accidentally or because battery is low): Simply press the RESET button; the corkscrew spiral will rotate in the opposite direction, allowing you to withdraw the wine opener from the wine bottle. NOTE: Pressing the RESET button will also stop the corkscrew spiral while it's rotating.

CLEANING AND MAINTENANCE

Always unplug the appliance from the electrical outlet before cleaning. To clean housing, wipe with a clean, damp cloth. Never immerse power adapter, charging base or housing in water or any other liquids. Never submerge the motor base in water or other liquids, or place in a dishwasher.

The aerator is not dishwasher safe. Rinse with tap water and dry before storing.

Any other servicing should be performed by an authorized service representative.

WARRANTY

LIMITED THREE-YEAR WARRANTY

We warrant that this Cuisinart product will be free of defects in materials or workmanship under normal home use for 3 years from the date of original purchase. This warranty covers manufacturer's defects including mechanical and electrical defects. It does not cover damage from consumer abuse, unauthorized repairs or modifications, theft, misuse, or damage due to transportation or environmental conditions. Products with removed or altered identification numbers will not be covered.

This warranty is not available to retailers or other commercial purchasers or owners. If your Cuisinart product should prove to be defective within the warranty period, we will repair it or replace it if necessary. For warranty purposes, please register your product online at www.cuisinart.ca to facilitate verification of the date of original purchase and keep your original receipt for the duration of the limited warranty. This warranty excludes damage caused by accident, misuse or abuse, including damage caused by overheating, and it does not apply to scratches, stains, discolouration or other damage to external or internal surfaces that does not impair the functional utility of the product. This warranty also expressly excludes all incidental or consequential damages.

Your Cuisinart product has been manufactured to the strictest specifications and has been designed for use only in 120 volt outlets and only with authorized accessories and replacement parts. This warranty expressly excludes any defects or damages caused by attempted use of this unit with a converter, as well as use with accessories, replacement parts or repair service other than those authorized by Cuisinart.

If the appliance should become defective within the warranty period, do not return the appliance to the store. Please contact our Customer Service Centre:

Toll-free phone number:

1-800-472-7606

Address:

Cuisinart Canada
100 Conair Parkway
Woodbridge, ON L4H 0L2

Email:

consumer_Canada@conair.com

Model:

RWO-100C

To facilitate the speed and accuracy of your return, please enclose:

- \$10.00 for shipping and handling of the product (cheque or money order)
- Return address and phone number
- Description of the product defect
- Product date code*/copy of original proof of purchase
- Any other information pertinent to the product's return

* The date code format we are using on unit is WWYY, representing week, and year. eg.2420 = manufactured in 24th week of the year 2020.

NOTE: We recommend you use a traceable, insured delivery service for added protection.

Cuisinart will not be held responsible for in-transit damage or for packages that are not delivered to us. To order replacement parts or accessories, call our Customer Service Centre at 1-800-472-7606. For more information, please visit our website at **www.cuisinart.ca**.

DISPOSAL/RECYCLING OF BATTERIES

This product uses two Li-ion rechargeable and recyclable batteries. At the end of the batteries' useful life, they should be recycled. These batteries must not be incinerated or composted. Li-ion batteries should not be put in municipal waste systems. Contact your local waste collection agency for proper recycling and disposal information for your area. Please do not attempt to dismantle the power handle to replace these batteries on your own. Damage could result to the unit.



POWERFUL. PORTABLE. CORDLESS.

©2020 Cuisinart Canada
100 Conair Parkway,
Woodbridge, ON L4H 0L2
Consumer Call Centre E-mail:
Consumer_Canada@Conair.com

Printed in China

20CC075632

IB-16642-CAN