

Cuisinart baby™ INSTRUCTION BOOKLET



Baby Bottle Warmer

BW-10C SERIES

For your safety and continued enjoyment of this product, always read the instruction book carefully before using.

IMPORTANT SAFEGUARDS

When using an electrical appliance, basic safety precautions should always be adhered to, including the following:

1. **READ ALL INSTRUCTIONS.**
2. **Always unplug unit from outlet when not in use, before putting on or taking off parts, and before cleaning. To unplug, grasp plug and pull from electrical outlet. Never pull cord. Allow to cool before handling.**
3. To protect against risk of electric shock, do not put cord, plug or unit base in water or other liquids.
4. Close supervision is necessary when any appliance is used by or near children.
5. **Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions, or if appliance has been dropped or damaged in any manner. Return the appliance to the nearest authorized Cuisinart Service Facility for examination, repair, and electrical or mechanical adjustment.**
6. The use of attachments not recommended or sold by Cuisinart may cause fire, electric shock or injury.
7. Do not let cord hang over edge of table or counter, or touch hot surfaces.
8. Don't attempt to handle the electrical cord to plug or unplug the unit when your hands are wet.
9. Do not use outdoors.
10. **Before serving be sure food is at safe temperature.**
11. Do not touch hot surfaces. Use handles or knobs.

12. Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
13. Follow guidelines in the instructions for amount of water for a given bottle size depending on room or refrigerator temperature.
14. Always be sure that you are using the correct volume of water before beginning the warming cycle. The warmer should be emptied of residual water before each subsequent use.
15. When in use, the warmer contains hot water. Be careful to avoid spilling any water on yourself when removing bottle or jar from warmer.
16. Do not operate your appliance in an appliance garage or under a wall cabinet. **When storing in an appliance garage, always unplug the unit from the electrical outlet.** Not doing so could risk a fire, especially if the appliance touches the walls of the garage or the door touches the unit as it closes.
17. Do not use the appliance for other than intended use.
18. Where applicable, always attach plug to appliance and check that the control is OFF before plugging cord into wall outlet. To disconnect, turn the control to OFF, then remove plug from wall outlet.
19. Do not place on or near a hot gas or electric burner, or in a heated oven.

SAVE THESE INSTRUCTIONS

FOR HOUSEHOLD USE ONLY

SPECIAL CORD SET INSTRUCTIONS

A short power supply cord is provided to reduce the risks of becoming entangled in or tripping over a longer cord. Extension cords may be used if care is exercised.

If an extension cord is used, the marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance. The longer cord should be arranged so that it will not drape over the countertop or tabletop, where it can be pulled on by children or tripped over unintentionally.

NOTICE

This appliance has a polarized plug (one prong is wider than the other). As a safety feature, this plug will fit into a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.


CONTENTS

Important Safeguards.....	2
Features and Benefits	3
Before First Use	4
Operation.....	4
Bottle Warming Guide.....	4
Tips and Hints	6
Troubleshooting.....	6
Cleaning and Maintenance	6
Warranty	7

FEATURES AND BENEFITS

1. **Bottle Basket** – holds any size glass or plastic bottle.
2. **Measuring Cup** – stores conveniently inside unit.
- 3a. **Nightlight** – makes nighttime feedings a little easier.
- 3b. **Nightlight Button** – to use light independently from bottle warmer.
4. **Adapter Ring** – traps steam for faster heat-up when warming narrow bottles.

5. **Food Warming Basket** – uses steam to heat up food quickly.
6. **Simple Dial Control** – easy OFF/ON operation.
7. **Cord Wrap (not shown)** – takes up excess cord and keeps countertop neat.
8. **BPA Free (not shown)** – all materials that come into contact with food are BPA free.

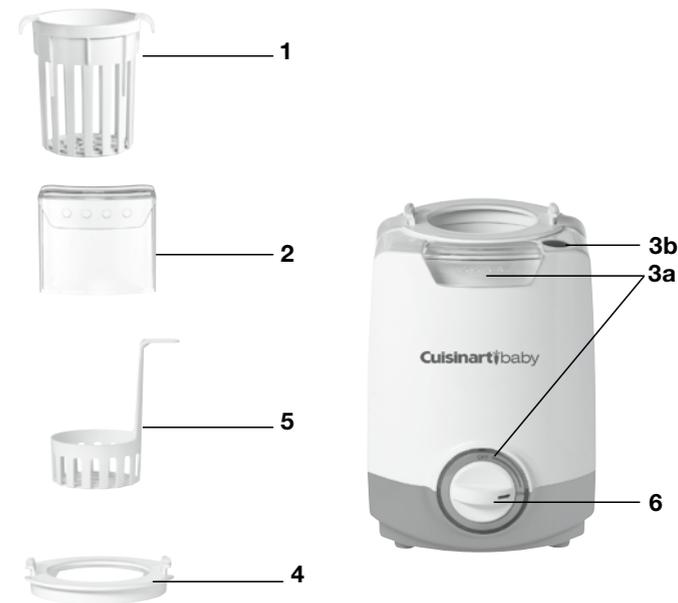

BEFORE THE FIRST USE

Carefully unpack the unit and remove any packaging and promotional labels in or on the bottle warmer. Rinse all accessories thoroughly in warm soapy water.

OPERATION


To warm your baby's bottle or food, please follow the instructions and the chart below.

NOTE: These instructions are to be used as a guide only. Please note that there are many variables, such as size of the bottle and starting temperature of the food, which can affect the speed at which this unit warms the bottle or jar as well as the final temperature. Adjustments to the instructions below may be necessary. **Always test the temperature of food before feeding baby.**

1. Remove the measuring cup from the front of the housing (fig. 1) and fill it with water to the appropriate fill line, according to the chart below.

2. Pour the pre-measured amount of water from the measuring cup directly into the warming chamber (fig. 2).
3. Do not overfill. If too much water is used, the bottle or jar may be heated for too long a period and reach too high a temperature.

Note: Always make sure there is no water in chamber from previous use. To empty the unit of leftover water, tilt the unit onto its side over the sink. Any extra water will come out.

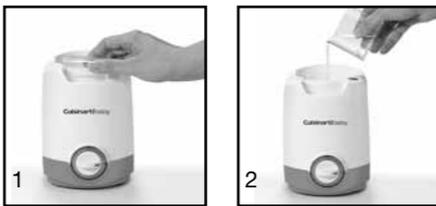

USING THE BOTTLE BASKET


For plastic bottles

1. Put the bottle basket into the bottle-warming chamber (fig. 3, 4). Line up the bottle basket arms with the insets on the bottle warmer housing. In this position the basket will be even/flush with the housing.



For glass bottles

1. Put the bottle basket into the bottle warming chamber (fig. 5, 6) and turn the bottle basket to a 45-degree angle (basket will slide into place). In this position the bottle basket will sit about 1 inch (2.5cm) above the housing.

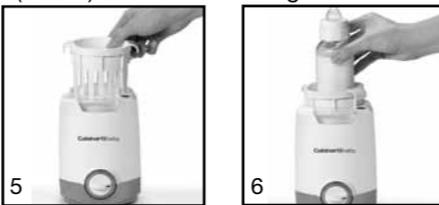

2. Put the bottle into the bottle basket (fig. 4, 6) and turn the dial to ON position. Blue LED indicator will turn on. The unit will shut off automatically once bottle warming is complete. Turn the dial to the OFF position.
3. Let the bottle sit for 15 to 30 seconds before removing and be extremely careful removing the bottle from the unit. Shake the bottle to distribute the heated contents before checking the temperature.

USING THE ADAPTER RING

1. When warming a narrow bottle, we suggest that you use the adapter ring.
2. Position the adapter ring over the bottle sitting in the bottle warming chamber and turn the dial to the ON position. Blue LED indicator will turn on. The unit will shut off automatically once bottle warming is complete. Turn the dial to the OFF position.

NOTE: If the adapter ring does not fit loosely around the bottle, do not use.



USING THE FOOD WARMING BASKET

1. Remove the lid of the food jar and then place the jar into the food warming basket. Use the handle to lower it into the bottle warming chamber (fig. 1).
2. Turn the dial to the ON position. Blue LED indicator light will turn on. The unit will shut off automatically once food warming is complete. Turn the dial to the OFF position.
3. Let the jar sit for 15 to 30 seconds before removing. Use the handle of the food-warming basket to lift the jar out of the warming chamber (fig. 2). When you remove the jar from the unit, the contents of the jar will not be evenly heated. Stir the food to distribute the heated contents before checking the temperature.



USING THE NIGHTLIGHT

1. To turn the nightlight on, press the gray button with the word LIGHT above it located on the top of the unit.
2. Light will illuminate from the measuring cup area and from around the dial. The nightlight will stay on until the button is pressed again.



TIPS AND HINTS

For best results, use purified water to prevent calcium deposits in the warming chamber. When storing food, refrigerated food should be enjoyed within 3 days, and frozen foods should be used within 30 days for optimum freshness.

TROUBLESHOOTING

Q: Why won't steaming start when I turn the unit on?

A: Check that the plug is securely inserted into the outlet.

A: The warming chamber may be empty. Add water to the steam chamber.

Q: How do I empty the unit of excess water?

A: To empty the unit of excess water, tilt the unit onto its side over the sink and any extra water will come out.

Q: Why is there a white residue in the bottle warming chamber?

A: Mineral-rich water causes calcium deposits to build up in the bottle warming chamber. The unit should be cleaned out once a month to avoid this buildup. See decalcification section in Cleaning and Maintenance, following. To help prevent/minimize this buildup, fresh or purified water can be used.

Q: Why is the milk bottle/food jar too hot or too cold?

A: Because there are so many variables when warming bottles/food jars, adjustments to the water amounts in the instruction booklet may be necessary. If the bottle/food jar was too hot try adding less water next time. If it was too cold try adding more water next time.

A: Make sure to shake the bottle/stir the food to distribute the heated contents after warming before checking the temperature.

CLEANING AND MAINTENANCE

Cleaning accessories and base

- Clean all accessories in warm soapy water or on the top rack of the dishwasher.
- Wipe the base clean with a damp sponge or cloth. Dry it immediately. Never submerge the base or the plug in water or other liquids.

Decalcification

- Sometimes mineral deposits form inside the steam chamber and can cause damage to the machine. To avoid buildup of these minerals, the unit should be de-scaled once a month.
- To descale, pour 50 ml of white (distilled) vinegar into the steam chamber. Leave for at least 2 hours then empty.

Storage

- The Cuisinart Baby® Bottle Warmer stores neatly on the countertop, taking a minimum of space. When it is not in use, make sure to empty any leftover water from the unit and leave it unplugged. The hidden cord storage underneath the base will help keep excess cord off the countertop.
- The Cuisinart Baby® Bottle Warmer is intended for **HOUSEHOLD USE ONLY**. Any service other than cleaning and normal user maintenance should be performed by an authorized Cuisinart Service Representative.

WARRANTY Limited 3 Years Warranty

We warrant that this Cuisinart product will be free of defects in materials or workmanship under normal home use for 3 years from the date of original purchase. This warranty covers manufacturer's defects including mechanical and electrical defects. It does not cover damage from consumer abuse, unauthorized repairs or modifications, theft, misuse, or damage due to transportation or environmental conditions. Products with removed or altered identification numbers will not be covered.

This warranty is not available to retailers or other commercial purchasers or owners. If your Cuisinart product should prove to be defective within the warranty period, we will repair it or replace it if necessary. For warranty purposes, please register your product online at www.cuisinart.ca to facilitate verification of the date of original purchase and keep your original receipt for the duration of the limited warranty. This warranty excludes damage caused by accident, misuse or abuse, including damage caused by overheating, and it does not apply to scratches, stains, discoloration or other damage to external or internal surfaces that does not impair the functional utility of the product. This warranty also expressly excludes all incidental or consequential damages.

Your Cuisinart product has been manufactured to the strictest specifications and has been designed for use only in 120 volt outlets and only with authorized accessories and replacement parts. This warranty expressly excludes any defects or damages caused by attempted use of this unit with a converter, as well as use with accessories, replacement parts or repair service other than those authorized by Cuisinart.

If the appliance should become defective within the warranty period, do not return the appliance to the store. Please contact our Customer Service Centre:

Toll-free phone number:
1-800-472-7606

Address:
Cuisinart Canada
100 Conair Parkway
Woodbridge, Ont. L4H 0L2

Email:
consumer_Canada@conair.com

Model:
BW-10C

To facilitate the speed and accuracy of your return, please enclose:

- \$10.00 for shipping and handling of the product (cheque or money order)
- Return address and phone number
- Description of the product defect
- Product date code*/copy of original proof of purchase
- Any other information pertinent to the product's return

* Product date code can be found on the underside of the base of the product. The product date code is a 4 or 5 digit number. Example, 90630 would designate year, month & day (2009, June 30th).

Note: We recommend you use a traceable, insured delivery service for added protection. Cuisinart will not be held responsible for in-transit damage or for packages that are not delivered to us.

To order replacement parts or accessories, call our Customer Service Centre at 1-800-472-7606. For more information, please visit our website at www.cuisinart.ca.

Cuisinart baby™



Baby Food Maker
& Bottle Warmer



Sterilizer



Juicers



Blenders



Tools and
Gadgets

Cuisinart offers an extensive assortment of top quality products to make life in the kitchen easier than ever. Try some of our other countertop appliances, cookware, tools and gadgets.

www.cuisinartbaby.ca

www.cuisinart.ca

©2012 Cuisinart Canada
100 Connaught Parkway,
Woodbridge, Ontario L4H 0L2

Printed in China

12CC135869