

# Cuisinart

## Elite Collection™

INSTRUCTION AND  
RECIPE BOOKLET



**Griddler® Deluxe**

**GR-150C**

For your safety and continued enjoyment of this product, always read the instruction book carefully before using.

---

## IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. **READ ALL INSTRUCTIONS.**
2. **Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning appliance.**
3. Do not touch hot surfaces; use handles, knobs or buttons.
4. To protect against fire, electric shock, and injury to persons, **DO NOT IMMERSE CORD OR PLUG** in water or other liquids.
5. Close supervision is necessary when any appliance is used by or near children.
6. Do not operate any appliance with a damaged cord or plug, or after the appliance has malfunctioned or has been damaged in any manner. Return the appliance to the nearest Cuisinart Repair Center for examination, repair or adjustment.
7. The use of accessory attachments not recommended by Cuisinart may result in fire, electrical shock, or risk of injury to persons.
8. Do not use outdoors.
9. Do not let power cord hang over edge of table or counter, or touch hot surfaces.
10. Do not place on or near hot gas or electric burners, or in a heated oven.
11. Unplug the unit when finished using.
12. Do not use appliance for other than intended use.
13. Extreme caution must be exercised when moving an appliance containing hot oil or other hot liquids.
14. Always attach plug to appliance first, then plug cord in the wall outlet. To disconnect, turn both Temperature Knobs of UPPER PLATE and LOWER PLATE to OFF setting, then remove plug from wall outlet.

15. **WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, ONLY AUTHORIZED PERSONNEL SHOULD DO REPAIRS.**

16. Do not operate your appliance in an appliance garage or under a wall cabinet. **When storing in an appliance garage always unplug the unit from the electrical outlet.** Not doing so could create a risk of fire, especially if the appliance touches the walls of the garage or the door touches the unit as it closes.

## SAVE THESE INSTRUCTIONS FOR HOUSEHOLD USE ONLY SPECIAL CORD SET INSTRUCTIONS

A short power-supply cord is provided to reduce the risks resulting from becoming entangled in or tripping over a longer cord. Extension cords may be used if care is exercised in their use.

If an extension cord is used, the marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance, and the longer cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or animals, or tripped over.

### NOTICE

 
This appliance has a polarized plug (one blade is wider than the other) to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not modify the plug in any way.

# CONTENTS

Important Safeguards.....	2
Features and Benefits.....	3
Before the First Use.....	4
Assembly Instructions .....	4
Griddler® Deluxe Positions .....	4
Operating the Griddler® Deluxe.....	5
Cleaning and Care .....	6
User Maintenance.....	6
Storage.....	6
Troubleshooting Chart .....	7
Receipe .....	8
Warranty.....	27

# FEATURES AND BENEFITS

- 1. Base and Cover**  
Solid construction with stainless steel self-adjusting cover.
- 2. Panini-Style Handle**  
Sturdy cast-metal handle adjusts cover to accommodate thickness of food.
- 3. Control Panel**
- 4. Removable and Reversible Cooking Plates**  
Nonstick and dishwasher safe for easy cleanup.
  - a. Grill Side:** Perfect for grilling steak, burgers, chicken and vegetables.
  - b. Griddle Side:** Prepare pancakes, eggs, heat tortillas, even sear scallops.

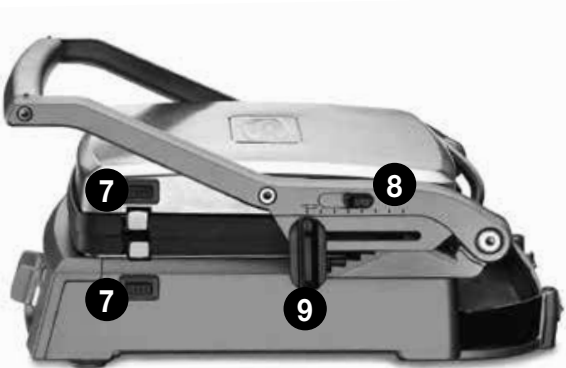

- 5. Drip Tray**  
Collects grease and removes from base for easy cleanup (dishwasher safe).
- 6. Cleaning/Scraping Tool**  
Helps clean grill and griddle plates after cooking (dishwasher safe).
- 7. Plate Release Buttons**  
Push in to release and remove cooking plates.
- 8. Hinge Release Lever**  
Allows the cover to extend back to the Flat position.
- 9. Cover Height Adjuster**  
Features 6 preset height positions for top melting. Locks cover closed for storage.

### BPA Free (not shown)

All materials that come in contact with food are BPA free.



## BEFORE THE FIRST USE

Remove all packaging materials and any labels or stickers from your grill. Be sure all parts (see **Features and Benefits**) have been included before discarding any packaging materials. You may want to keep the box and packing materials in the event that the unit has to be shipped in the future.

 
Before using your Cuisinart® Griddler® Deluxe for the first time, wipe the base, cover and controls with a damp cloth. Thoroughly clean cooking plates, drip tray and scraping tool; all are dishwasher safe. Refer to Assembly Instructions below for plate removal.

## ASSEMBLY INSTRUCTIONS

Place base on a clean, flat surface where you intend to cook, with the controls directly in front of you.

### To insert the cooking plates:

1. Choose the side(s) you intend to cook on. The two cooking plates each have two sides:
  - a. Grill side: ribbed surface intended for grilling steaks, hamburgers, chicken, seafood and vegetables. Also can be used for panini and other toasted sandwiches.
  - b. Griddle side: smooth surface intended for cooking bacon and eggs, pancakes and French toast. Also can be used for panini and other toasted sandwiches.

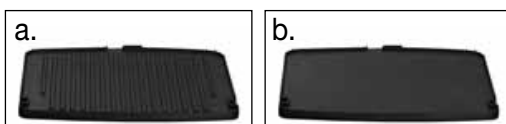

2. Locate the metal brackets at the back of the housing. Tilt the back end of the plate and line up the cutouts at the back of the plate with the metal brackets. Slide the plate underneath the brackets and push down the front end of the plate. It will snap into place. Insert the second plate into the upper housing as you did with the first plate.



3. Slide the drip tray into the base at the rear of the unit from the right side.



4. Plug the cord into a standard electrical outlet.
5. Just follow the instructions below to position the unit, and you're ready to cook!

## GRIDDLER® DELUXE POSITIONS

**STORAGE Position** – Upper plate/cover rests flat on the lower plate/base and cover height adjuster is in Lock position.

**PREHEAT Position** – Upper plate/cover rests flat on the lower plate/base and cover height adjuster is in Unlock position.

### OPEN COOKING Position –

**To cook on lower plate only:** Lift the handle so upper plate/cover is vertical. Plate does not “float” in this position.

### CLOSED COOKING Position –

**To Contact Grill or Panini Press:** Start with unit in Open Cooking position. Lower top carefully until plate contacts food. Hinge will automatically release the plate, allowing it to “float” and rest evenly on food. If necessary, press down slightly on front of upper plate/cover wearing oven mitt to release hinge.

**To Top Melt:** Start with unit in Open Cooking position. Wearing an oven mitt, press down slightly on front of upper plate/cover to release hinge, allowing plate to “float.” Lower it to close to the

desired height, then slide the cover height adjuster into a notch to set the position.

 


**FLAT COOKING Position – To cook on Full Grill, Full Griddle or Half Grill/Half Griddle:** Upper plate/cover opens to lie flat, level with the lower plate/base.

To adjust to this position from the Preheat position, put on oven mitts, open unit and slide the hinge release lever up while pushing the handle back. The upper plate/cover will sit flat, resting on the handle.

To adjust to this position from Closed Cooking position, first close the unit, resting upper plate/cover flat on lower plate/base. You will hear the upper plate click into place. Open unit and slide the hinge release lever up while pushing the handle back. The upper plate/cover will sit flat, resting on the handle.

To adjust to this position from Open Cooking position, grasp handle and pull slightly forward, then slide the hinge release lever up while pushing the handle back. The upper plate/cover will sit flat, resting on the handle.

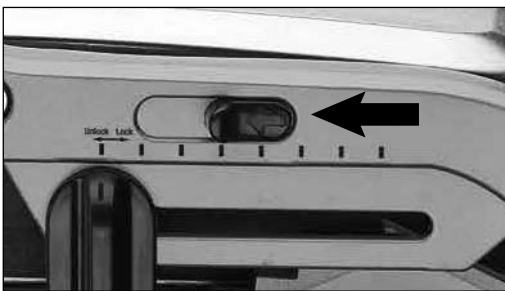

## OPERATING THE GRIDDLER® DELUXE

### Standard Cooking

1. Make sure the Griddler® Deluxe is in the PREHEAT position. We recommend you preheat with grill in the closed position.

2. Turn the UPPER PLATE and/or LOWER PLATE temperature to the desired setting – from Warm to 450°F.

See below for recommendations:

Cooking Option	Plate Selection
Contact Grill	Both
Panini Press	Both
Full Grill	Both
Full Griddle	Both
Half Grill and Half Griddle	Both
Half Grill or Half Griddle	Lower or Upper
Top Melt	Both

3. A red indicator light on the selected control will illuminate to indicate that the power is on. It may take up to 12 minutes to reach operating temperature, depending on the temperature level that was set.

**NOTE:** The first time you use the Griddler® Deluxe, it may have a slight odor and may smoke a bit. This is normal and common to appliances with nonstick surfaces.

4. When the thermostat has reached operating temperature, a green indicator light inside the chosen control will indicate that the Griddler® Deluxe is ready for cooking.

5. You may vary the setting of the control knob at any time during cooking.

6. To turn the plate(s) off, simply turn the temperature dial(s) to the OFF position.

**NOTE:** If the unit is on and heated for more than 2 hours, it will automatically shut off. This is a safety feature of the Griddler® Deluxe. To reactivate, simply turn either dial.

### SEAR Function

You can sear foods at 500°F for up to 2 minutes. **NOTE:** We do not recommend putting food on the grill during preheat.

1. Follow Standard Cooking, Step 1.
2. Press UPPER SEAR and/or LOWER SEAR button to initiate SEAR function. The LED light in the UPPER PLATE and/or LOWER PLATE temperature dial will go off.

3. The LED light around the UPPER SEAR and/or LOWER SEAR button(s) will illuminate red indicating the unit is heating to 500°F.
4. When the plate(s) reach the SEAR temperature, the LED light around the UPPER SEAR and/or LOWER SEAR button(s) will turn green and will flash ten times to allow enough time to put the food on the plate(s).
5. After 10 seconds, the green light will stop flashing and the upper and/or lower plates will sear for 2 minutes.
6. When the sear cycle has finished, the LED light around the UPPER SEAR and/or LOWER SEAR button(s) will go off and the unit will adjust to the temperature(s) selected on the corresponding temperature knobs.
7. To cancel SEAR, press the SEAR button(s) again. The LED light(s) will turn off and the unit will adjust to the temperature(s) selected on the corresponding temperature knobs.

## CLEANING AND CARE

1. Once you have finished cooking, turn Plate Selector dial(s) to the OFF position and unplug the power cord from the wall outlet. **Allow the unit to cool down for at least 30 minutes.**
2. Use the cleaning/scraping tool to remove any leftover food from the cooking plate(s).
3. Dispose of grease from the drip tray, once cooled.
4. Press the plate release buttons to remove cooking plates from the housing. Be sure that the plates have cooled completely before handling (at least 30 minutes).



5. Wipe down the plates to remove any leftover food. The cooking plates, drip tray and cleaning/scraping tool can be cleaned by hand or on the top shelf of the dishwasher. The housing base, cover and control panel can be wiped clean with a soft, dry cloth. For tough stains, dampen cloth. Never use an abrasive cleaner or harsh pad.

## USER MAINTENANCE

- Always exercise caution when handling the Griddler® Deluxe during cooking. Open and close the unit using the handle only. Do not touch the arms or top cover during or immediately after cooking, as they become hot during use. We recommend you wear oven mitts when handling the Griddler® Deluxe to prevent burns.
- Never use metal utensils, which will scratch the nonstick plates. Instead, use wooden or heat-proof plastic utensils.
- Never leave plastic utensils in contact with the hot grill plates. This includes the cleaning tool that is included.
- In between recipes, use cleaning/scraping tool to scrape excess food buildup through grease channels and into the drip tray. Wipe off any residue with a paper towel before proceeding with next recipe.
- Allow the Griddler® Deluxe to cool down completely (at least 30 minutes) before cleaning.
- Any other servicing should be performed by an authorized service representative.

## STORAGE

- Wrap the power cord around the cord storage clips at the back of the base.



- Store clean cooking plates and drip tray in the unit.
- Lock unit closed by sliding the cover height adjuster to the Lock position.



## Troubleshooting Chart

Subject	Question	Answer/Solution
<b>Power</b>	Why won't my unit turn on?	Check to make sure your unit is plugged into a functional outlet.
		Contact Customer Service at 1-800-472-7606.
	Why is my unit turning itself off?	It is possible the unit overheated. Wait for the unit to cool down and try again. If it does not turn back on, contact Customer Service at 1-800-472-7606.
<b>Programming</b>	Can I change my temperature or plate selection when the unit is already cooking?	If your Griddler® Deluxe is not turned off or if you do not change any settings, it will shut off automatically after 2 hours. This is a safety feature. To reactivate, simply turn either dial.
	Can I sear when I'm already cooking?	Yes. To change temperature of your current plate selection, simply turn the plate's temperature dial and the unit will adjust automatically. To change your plate selection, simply turn the temperature dial for your new selection.
<b>Cleaning</b>	Are the parts and accessories dishwasher safe?	Yes. Simply press the SEAR button(s) and the plates will preheat to sear temperature. We recommend you take the food off during SEAR preheat. Once the SEAR cycle is complete, the unit will revert back to previously selected temperatures.
	Food residue is sticking to the plates. How do I clean them without damaging them?	Yes, all removable parts are dishwasher safe. Do not immerse or put the base of the unit in the dishwasher. Clean it and the control panel with a damp cloth.
		Use the scraper tool provided to scrape off any excess food buildup. Do not use metal utensils to clean the plates as they can damage the nonstick coating.

# The GRIDDLER<sup>®</sup> DELUXE

a guide to perfect meals



**Cuisinart<sup>®</sup>**



---

# Table of Contents

<b>COOKING GUIDE AND FOOD TEMPERATURE CHART .....</b>	<b>10</b>
<b>PIZZA CHART.....</b>	<b>11</b>
<b>SANDWICH CHART .....</b>	<b>13</b>
<b>STEAK CHART.....</b>	<b>15</b>
<b>RECIPES.....</b>	<b>16</b>
Perfect Pancakes.....	16
Crab Cakes.....	16
Classic Tomato Bruschetta .....	17
The All-American Burger.....	18
Open-Faced Turkey Sandwich.....	19
Fish Tacos .....	19
Grilled Vegetables.....	20
The Perfect Combination: Grilled Potato “Chips” and Onion Rings.....	21
Garlic and Herb Marinated Lamb Chops.....	21
Teriyaki Glazed Salmon.....	22
Rib-Eye Steaks .....	23
Compound Herb Butter .....	24

# Cooking Guide and Food Temperature Chart

Food	Preparation	Plate and Position	Suggested Grilling Temperatures and Times
<b>Bacon</b>	Place in a single layer.	Grill or Griddle; Flat or Open	Place bacon on cold plates. Turn to 450°F (220°C). Cook until desired doneness. Should take about 20 to 25 minutes for 1 pound of bacon (if using the Flat position).
<b>Beef, boneless steak</b> (refer to the Steak Chart for specific times and temperatures)	Up to 2 (5 cm) inches thick. Season to taste. Drain off marinade completely if marinated before grilling. Allow to come to room temperature for best results.	Grill; Closed, Open or Flat	<p>When cooking in the Closed position, preheat to SEAR (with 450°F [220°C] as the default). Put the steak(s) on the preheated lower grill plate. Using the cover height adjuster, set the upper plate so it is just sitting on top of the steak, but not pressing it. Sear for 2 minutes, then the grill will revert to 450°F (220°C). Cook for 2 to 5 minutes, depending on thickness and desired doneness. Rest for 5 minutes before serving.</p> <p>When cooking in the Open or Flat positions, preheat to 450°F (220°C). Put the steaks on the preheated grill plates. Cook for about 4 to 6 minutes per side, depending on the thickness of the steaks and desired doneness. Rest for 5 minutes before serving.</p>
<b>Chicken Breasts</b> (boneless)	Pound to an even thickness of no more than 1 inch (2.5 cm).	Grill; Closed	Preheat to 400°F (200°C). Cook for 7 to 9 minutes. (Internal temperature should be 165°F [74°C]- juices will run clear with no signs of pink.)
<b>Chicken Thighs</b> (boneless)	Spread to even thickness.	Grill; Closed	Preheat to 400°F (200°C). Cook for 8 to 10 minutes. (Internal temperature should be 170°F [75°C]- juices will run clear with no signs of pink.)
<b>Fish Steaks</b> (sword, tuna, salmon/boned)	No more than 1 to 2 inches (2.5 to 5 cm) thick.	Grill; Closed, Open or Flat	Preheat to 400°F (200°C). Cook for 6½ to 7 minutes when grilling in the Closed position. 7 to 12 minutes in the Flat position, flipping halfway through. Timing depends on the firmness of the fish.
<b>Beef, hamburgers</b>	Shape meat into burgers of even weight and thickness.	Grill; Closed (with cover height adjuster)	Preheat to 450°F (220°C). Put the burgers on the preheated lower grill plate. Using the cover height adjuster, set the upper plate so it is just sitting on top of the burgers, but not pressing them. Grill burgers for about 4 to 8 minutes, depending on thickness and desired doneness.
<b>Beef, cheeseburgers</b>	Shape meat into burgers of even weight and thickness.	Grill; Closed (with cover height adjuster)	Same as above, but once burger is nearly cooked, with about 1½ minutes remaining (it is helpful to use the timer with this recipe), carefully open upper plate, place piece of cheese on top of burgers, and then using the cover height adjuster, close upper plate so that it is sitting right above the top of the cheeseburger, not touching it. Cook until cheese is just melted.
<b>Sausages, fresh</b>	Prick links with tines of fork or tip of paring knife.	Grill or Griddle; Closed	Preheat to 450°F (220°C). Put the links on the preheated grill/griddle plates - the grill ribs are perfect for holding the links in place, and allow for easy turning for even cooking. Close the top. Grill for about 12 minutes (turning halfway through) depending on the thickness of the sausages.
<b>Panini</b> (see Sandwich Chart for delicious fillings)	Brush tops and bottoms of bread with oil before grilling.	Grill or Griddle; Closed	Preheat both plates to 400°F (200°C). Put the prepared sandwiches on the preheated lower grill/griddle plate. Close the top. Allow sandwiches to cook for about 4 to 6 minutes, depending on thickness of sandwiches.
<b>Open-Faced Sandwiches</b> (see Sandwich Chart for some great recipes)	Prepare desired sandwiches to a height of 1½ inches (7.5 cm).	Grill or Griddle; Closed (with cover height adjuster)	Preheat lower plate to 350°F (180°C); upper plate to 450°F (220°C). Put the prepared sandwiches on the preheated lower grill/griddle plate. Using the cover height adjuster, close upper plate until it is sitting right above the top of the sandwich, not touching it. Cook sandwich until cheese on top is fully melted and lightly browned, about 5 to 7 minutes, depending on the type of sandwich.

Food	Preparation	Plate and Position	Suggested Grilling Temperatures and Times
<b>Quesadillas</b>	Prepare quesadillas according to your favorite recipe.	Grill or Griddle; Closed (with cover height adjuster)	Preheat both plates to 400°F (200°C). Put the prepared quesadilla on the preheated lower plate. Close the top and using the cover height adjuster, set the upper plate so it is just sitting on top of the quesadillas. Grill for about 2 to 3 minutes, depending on thickness and filling of the quesadillas.
<b>Eggs</b>	Fried or over-easy. Up to 4 eggs per plate.	Griddle; Open or Flat	Preheat to 350°F (180°C). Break the eggs onto the hot griddle plates. Flip once whites are set, about 3 to 3½ minutes, and then remove when cooked to desired doneness.
<b>French Toast</b>	Prepare French toast as desired.	Griddle; Open	Preheat to 350°F (180°C). Flip after 3 to 5 minutes, depending on thickness. Cook for an additional 2 to 3 minutes.
<b>Steak &amp; Eggs</b>	Up to 2 inches (2.5 cm) thick. Season to taste. Drain off marinade well if marinated before grilling.	Grill and Griddle; Open	Preheat lower plate to 350°F (180°C); upper plate to 450°F (220°C). Put the seasoned steak(s) on the preheated upper grill plate. Grill for about 4 to 10 minutes per side, depending on thickness and desired doneness. After flipping steak(s) to cook the second side, add the eggs to the preheated griddle plate and cook for 3 to 3½ minutes per side. At that time, the steaks should be done as well (or shortly thereafter, depending on the thickness).
<b>Vegetables</b>	Have vegetables evenly cut. Season or marinate if desired.	Grill; Open, Flat or Closed (if closed, be sure that the vegetables are all the exact same thickness, or results will be uneven)	Preheat to 400°F (200°C). Grill until tender. This will vary depending on the types of vegetables used, but should take between 10 and 30 minutes. Refer to our recipe on page 20 for more specifics.
<b>Pizza</b> (see Pizza Chart for great recipe ideas)	Prepare pizza dough or use purchased; prepare desired toppings.	Grill; Closed and Open (with cover height adjuster)	Grill dough on 450°F (220°C) with the unit closed. Open to add toppings and using the cover height adjuster, close upper plate until it is sitting right above the top of the pizza, not touching it. Cook until cheese/toppings are melted and browned, about 10 to 15 minutes.

## Pizza Chart

The Cuisinart kitchen could go on for pages with delicious recipes for tasty pizzas - and you have your favorites too - but here is a small selection of some combinations and tips that will hopefully bring some new flavors to your table. The cover height adjuster and top-melting feature of the Cuisinart® Griddler® Deluxe makes it the perfect tool for grilled pizzas. You can always start out with our classic Grilled Pizza on page 11 and build from there, or you can take some components from the options below as a fun treat for your family.

Food	Ingredients	Preparation	Cooking Procedure
<b>Eggplant-Pesto-Tomato</b>	¾ to 1 pound (335 to 450 g) pizza dough olive oil for brushing ¼ cup (60 ml) prepared pesto ½ small eggplant, ½-inch (1.25 cm)-thick round slices - grilled for 4 minutes per side 1 cup (250 ml) halved cherry tomatoes salt and pepper, to taste 2 ounces (58 ml) fresh mozzarella, sliced into 1- to 2-inch (2.5 to 5 cm) pieces	Cooking Position and Plates: Closed; Grill or Griddle Preheat Temperature: 450°F (220°C) upper and lower Roll dough out to about 10-inch (25 cm) rectangle, to fit shape of plate as best you can. Brush top and bottom of dough with olive oil.	Grill oiled pizza dough for about 5 minutes in the Closed position. Open grill and carefully top with pesto, eggplant, tomatoes, salt, pepper and mozzarella. Using the cover height adjuster, close upper plate until it is sitting right above the top of the pizza, not touching it. Cook until cheese/toppings are melted, about 10 to 15 minutes.

Food	Ingredients	Preparation	Cooking Procedure
<b>Mushroom-Fontina</b>	<p>¾ to 1 pound (335 to 450 g) pizza dough</p> <p>olive oil for brushing</p> <p>6 cups (1500 ml) mushrooms</p> <p>3 tablespoons (45 ml) olive oil</p> <p>¼ (1 ml) teaspoon salt</p> <p>pepper, to taste</p> <p>4 sprigs fresh thyme, leaves only (stems discarded)</p> <p>1 garlic clove, finely chopped</p> <p>½ small shallot, sliced</p> <p>2 to 3 tablespoons (30 to 45 ml) grated Parmesan</p> <p>3 ounces (85 g) Fontina, shredded</p>	<p>Cooking Position and Plates: Open and Closed; Griddle</p> <p>Preheat Temperature: 350°F (180°C) upper and lower</p> <p>Roll dough out to about 10-inch (25 cm) rectangle, to fit shape of plate as best you can. Brush top and bottom of dough with olive oil. Cover lightly with plastic wrap until ready to use. Toss mushrooms, 3 tablespoons oil, salt, pepper, thyme, garlic and shallot together.</p>	<p>Sauté mushroom mixture on hot griddle plates in the Open position until softened, about 6 to 10 minutes. Remove and reserve.</p> <p>Increase temperature to 450°F (220°C) on both plates.</p> <p>Once preheated, place oiled dough on the lower griddle plate; close upper plate and allow to cook for about 5 minutes.</p> <p>Open unit and carefully top dough with reserved mushroom mixture and both cheeses.</p> <p>Using the cover height adjuster, close upper plate until it is sitting right above the top of the pizza, not touching it. Cook until cheese is melted, about 10 to 15 minutes.</p>
<b>Bacon-Olive</b>	<p>¾ to 1 pound (335 to 450 g) pizza dough</p> <p>olive oil for brushing</p> <p>½ cup (125 ml) pizza sauce</p> <p>2 garlic cloves, thinly sliced</p> <p>6 slices bacon, cooked and crumbled</p> <p>½ cup (125 ml) halved and pitted olives, green or black</p> <p>2 pinches dried fines herbes</p> <p>¼ cup (60 ml) shredded Parmesan</p>	<p>Cooking Position and Plates: Closed; Grill or Griddle</p> <p>Preheat Temperature: 450°F (220°C) upper and lower</p> <p>Roll dough out to about 10-inch (25 cm) rectangle, to fit shape of plate as best you can. Brush top and bottom of dough with olive oil. Cover lightly with plastic wrap until ready to use.</p>	<p>If bacon was not already cooked, it may be cooked on the 450°F (220°C) griddle plates. Then remove and grill pizza dough in the closed position for 5 minutes.</p> <p>Open unit and carefully top dough with remaining ingredients, finishing with the cheese.</p> <p>Using the cover height adjuster, close upper plate until it is sitting right above the top of the pizza, not touching it. Cook until cheese is melted, about 10 to 15 minutes.</p>
<b>Ricotta, Fig and Prosciutto</b>	<p>¾ to 1 pound (335 to 450 g) pizza dough</p> <p>olive oil for brushing</p> <p>½ cup (125 ml) ricotta, strained</p> <p>1 tablespoon (15 ml) grated Parmesan</p> <p>salt and pepper, to taste</p> <p>figs, sliced</p> <p>prosciutto, torn into small pieces</p> <p>Brie, sliced</p> <p>blue cheese, crumbled</p> <p>honey, for finishing</p>	<p>Cooking Position and Plates: Closed; Grill or Griddle</p> <p>Preheat Temperature: 450°F (220°C) upper and lower</p> <p>Roll dough out to about 10-inch (25 cm) rectangle, to fit shape of plate as best you can. Brush top and bottom of dough with olive oil. Cover lightly with plastic wrap until ready to use.</p> <p>Stir together the ricotta, Parmesan, salt and pepper.</p>	<p>Grill oiled dough on the hot grill/griddle plates for 5 minutes.</p> <p>Open unit and carefully top dough with the ricotta mixture, figs, prosciutto, Brie and blue cheese.</p> <p>Using the cover height adjuster, close upper plate until it is sitting right above the top of the pizza, not touching it. Cook until cheese is melted, about 10 to 15 minutes.</p> <p>Before serving, drizzle with honey.</p>
<b>Sausage, Onion and Pecorino</b>	<p>¾ to 1 pound (335 to 450 g) pizza dough</p> <p>olive oil for brushing</p> <p>1 to 2 links Italian sausage, cooked and crumbled</p> <p>1 medium onion, sliced and griddled/grilled</p> <p>½ cup (125 ml) pizza sauce</p> <p>¼ cup (60 ml) shaved/thinly sliced pecorino</p>	<p>Cooking Position and Plates: Closed; Griddle</p> <p>Preheat Temperature: 450°F (220°C) upper and lower</p> <p>Roll dough out to about 10-inch (25 cm) rectangle, to fit shape of plate as best you can. Brush top and bottom of dough with olive oil. Cover lightly with plastic wrap until ready to use.</p>	<p>If sausage has not yet been cooked, grill sausage on the hot griddle plates until browned, about 8 minutes. (For best results, halve sausage lengthwise if using precooked. If using raw, prick links all over and then grill for a minute or two on each side.) Let sausage cool slightly and crumble or slice as desired.</p> <p>If onion has not yet been cooked, toss in some oil with salt and pepper. Place on hot griddle plates after removing sausage and allow to cook until softened, about 5 to 6 minutes. Remove and reserve.</p> <p>Grill oiled dough on the hot griddle plates, closed, for 5 minutes.</p> <p>Open unit and carefully top dough with the sauce, reserved onion and sausage and cheese.</p> <p>Using the cover height adjuster, close upper plate until it is sitting right above the top of the pizza, not touching it. Cook until cheese is melted, about 10 to 15 minutes.</p>

# Sandwich Chart

A sandwich is a beautiful thing - simple and comforting. Add some heat to cheese and bread and create the perfect lunch. Like any good meal, the perfect sandwich starts with the best ingredients that you can find. Use a nice hearty bread, good oil or butter, and fresh, in-season ingredients. Don't stop there, for your pantry probably has some great additions - roasted red peppers can add a lot of flavor to simple grilled chicken. Mayonnaise and mustards can do wonders. Have leftover barbecued chicken from the grill last night? Shred it and put it on bread. The options are endless. Place on the hot grill, press or top melt, and your sandwich will be ready before you can finish setting the table. The extra-large cooking surface allows you to make up to four sandwiches at a time.

Sandwich	Type	Prep It	Build It	Cook It
<b>The Perfect Grilled Cheese</b> (with variations)	Panini	Grill Position and Plates: Closed; Grill or Griddle Preheat Temperature: 400°F (200°C) upper and lower  Ingredients: Your favorite sliced bread • softened butter • a good melting cheese: classic American, Swiss varieties, Cheddar, etc.  If you're feeling adventurous, or just want a change from the ordinary, get some other ingredients ready: sliced deli pickles, sliced tomato, some bacon from yesterday's breakfast.	While grill is preheating, assemble your sandwiches:  Lightly brush one side of each slice of bread with the softened butter.  Layer the cheese on top of half of the un-buttered slices (if using optional fillings, layer them in between the cheese). Top with the other pieces of the bread, with the buttered side facing up.	Open grill carefully and place prepared sandwiches on the hot plate.  Close grill and set the cover height adjuster so the upper plate is just sitting on top of the bread.  Allow to cook for about 5 minutes, or until bread is crispy and cheese is fully melted.
<b>The Classic Italian</b>	Panini	Grill Position and Plates: Closed; Griddle or Grill Preheat Temperature: 400°F (200°C) upper and lower  Ingredients: Ciabatta or a rustic Italian bread (for ciabatta, cut into enough for 4 sandwiches; for Italian, cut 8 slices) • olive oil for brushing on bread • 8 (225 g) ounces of a variety of Italian meats (prosciutto, mortadella, salami, sopressata, etc.) • 2 roasted red peppers, drained and sliced • 4 ounces (115 g) of provolone • salt and pepper	While grill is preheating, assemble your sandwiches:  Lightly brush one side of each slice of bread with the oil.  Layer the meats on the bottom half of each bread slice, oiled side down. Top with the roasted pepper, then provolone. Sprinkle with salt and pepper if desired. Top with the other pieces of bread, oiled side facing up.	Open grill carefully and place prepared sandwiches on the hot plate.  Close grill to press the sandwich. Allow to cook for about 5 minutes, or until bread is crispy and cheese is fully melted.
<b>The Melt</b>	Open-Faced	Grill Position and Plates: Open; Grill or Griddle Preheat Temperature: 450°F (220°C) upper; 400°F (200°C) lower  Ingredients: 4 slices of your favorite sandwich bread • 1 cup (250 ml) of either chicken, tuna, turkey or egg salad • 4 slices (about 4 ounces [110 g]) Swiss, Cheddar or American cheese	While grill is preheating, assemble your sandwiches:  Lay the four slices of bread on a plate or tray. Top with the salad, and then with the cheese.	Open grill carefully and place prepared sandwiches on the hot plate.  Using the cover height adjuster, close upper plate until it is sitting right above the top of the sandwich, not touching it. Cook until cheese is melted, about 5 to 7 minutes.
<b>The Meat Lovers</b>	Panini	Grill Position and Plates: Closed; Grill or Griddle Preheat Temperature: 400°F (200°C) upper and lower  Ingredients: 8 slices of your favorite sandwich bread • softened butter, for brushing bread • brown deli mustard • 16 ounces (450 g) of your favorite deli meats (roast beef, turkey, ham, pastrami, etc.) • 6 to 8 ounces (175 to 225 g) Swiss cheese	While grill is preheating, assemble your sandwiches:  Lightly brush one side of each slice of bread with the softened butter. Brush the inside of 4 of the slices with the mustard.  Evenly distribute the meat on top of half of the bread, buttered side down.  Top with the Swiss, and then place the other slice of bread, mustard-side down, on top.	Open grill carefully and place prepared sandwiches on the hot plate.  Close grill to press the sandwich. Allow to cook for about 5 minutes, or until bread is crispy and cheese is fully melted.

<b>Sandwich</b>	<b>Type</b>	<b>Prep It</b>	<b>Build It</b>	<b>Cook It</b>
<b>The Californian</b>	Panini	<p>Grill Position and Plates: Closed; Grill or Griddle Preheat Temperature: 400°F (200°C) upper and lower</p> <p>Ingredients: 8 slices of your favorite sandwich bread • olive oil for brushing bread • grilled chicken breast*, sliced • sprouts • avocado, sliced • tomato, sliced • Cheddar</p> <p>*This can be coated with olive oil, salt and pepper and then grilled beforehand, or use any leftover chicken that you may have.</p>	<p>While grill is preheating, assemble your sandwiches: Lightly brush one side of each slice of bread with the olive oil. Evenly distribute the chicken, sprouts, avocado, tomato and cheddar on 4 slices of the bread, with the oiled side down. Top with the other slices of bread, oiled side up.</p>	<p>Open grill carefully and place prepared sandwiches on the hot plate. Close grill and set the cover height adjuster so upper plate is just sitting on top of the bread. Allow to cook for about 5 minutes, or until bread is crispy and cheese is fully melted.</p>
<b>The Gobbler</b>	Open-Faced	<p>Grill Position and Plates: Closed; Grill or Griddle Preheat Temperature: 400°F (200°C) upper and lower</p> <p>Ingredients: 4 slices of white sandwich bread • butter for brushing bread • mayonnaise • sliced turkey • prepared stuffing • cranberry sauce • Swiss cheese</p>	<p>While grill is preheating, assemble your sandwiches: Lightly brush one side of each slice of bread with the butter. Spread mayonnaise on the inside of the slices. Evenly distribute the turkey, stuffing, cranberry sauce and Swiss cheese on the 4 slices of bread, with the buttered side down. Top with the other slices of bread, buttered side up.</p>	<p>Open grill carefully and place prepared sandwiches on the hot plate. Using the cover height adjuster, close upper plate until it is sitting right above the top of the sandwich, not touching it. Allow to cook for about 5 minutes, or until bread is crispy and cheese is fully melted.</p>
<b>The Niçoise</b>	Panini	<p>Grill Position and Plates: Closed; Grill or Griddle Preheat Temperature: 400°F (200°C) upper and lower</p> <p>Ingredients: 8 slices of thickly cut rustic-style bread • olive oil, for brushing bread • tapenade • grilled tuna steak, sliced • sliced tomatoes</p>	<p>While grill is preheating, assemble your sandwiches: Lightly brush one side of each slice of bread with the oil. Evenly distribute the tuna and tomatoes on 4 slices of the bread, with the oiled side down. Spread the tapenade on the inside of the other 4 slices. Top sandwiches with these slices, tapenade facing down.</p>	<p>Open grill carefully and place prepared sandwiches on the hot plate. Close grill and set the cover height adjuster so upper plate is just sitting on top of the bread. Allow to cook for about 5 minutes, or until bread is crispy.</p>
<b>Chocolate Panini</b>	Panini	<p>Grill Position and Plates: Closed; Grill or Griddle Preheat Temperature: 400°F (200°C) upper and lower</p> <p>Ingredients: 8 slices of good quality rustic bread • olive oil, for brushing bread • 4 ounces (125 g) semi-sweet chocolate, chopped (you may also use Nutella®, about 2 tablespoons [30 ml] per sandwich)</p>	<p>While grill is preheating, assemble your sandwiches: Lightly brush one side of each slice of bread with the oil. Top the un-oiled side of four pieces with the chocolate. Top with the other slices of bread, oiled sides facing up.</p>	<p>Open grill carefully and place prepared sandwiches on the hot plate. Close grill and set the cover height adjuster so upper plate is just sitting on top of the bread. Allow to cook for about 5 minutes, or until bread is crispy and chocolate is melted.</p>

---

# Steak Chart

The SEAR function grills steaks to perfection. Here is a simple guide to cooking to your personal preference. We give instructions for grilling the steaks in the Closed position, but they can easily be done in the Open position as well - just flip the steaks halfway through. Remember to always monitor the temperature of your steaks to achieve desired doneness.

**Preparation:** Season to taste. Drain off marinade completely if marinated before grilling. Bring to room temperature for best results.

**Plate and Position** Grill; Closed

**Cooking Instructions** Two-minute SEAR (with 450°F [220°C] as the default). Put the steak(s) on the preheated lower grill plate. Using the cover height adjuster, set the upper plate so it is just sitting on top of the steak, but not pressing it.

<b>Steak Doneness</b>	<b>1" (2.5cm) thick steak</b>	<b>1.5" (4cm) thick steak</b>	<b>2" thick steak (5cm)</b>
<b>Rare</b> (120-125°F/49-52°C)	SEAR + 1 - 2 minutes	SEAR + 2 - 3 minutes	SEAR + 5 - 8 minutes
<b>Medium-Rare</b> (130-135°F/54-57°C)	SEAR + 2 - 4 minutes	SEAR + 3 - 5 minutes	SEAR + 8 - 12 minutes
<b>Medium</b> (140-145°F/60-63°C)	SEAR + 4 - 5 minutes	SEAR + 5 - 6 minutes	SEAR + 12 - 18 minutes
<b>Medium-Well</b> (150-155°F/66-68°C)	SEAR + 5 - 6 minutes	SEAR + 6 - 7 minutes	SEAR + 18 - 25 minutes
<b>Well</b> (160°F+/71°C)	SEAR + 6 minutes and up	SEAR + 7 minutes and up	SEAR + 25 minutes and up

## Steak Tips

- Allow steaks to sit at room temperature at least 15 minutes before grilling.
- Allow steaks to rest at 5 minutes after grilling so juices are able to redistribute before cutting. Otherwise all of that delicious juice will be on your plate and not in your steak.
- For the larger 2-inch (5 cm) steaks grill all 4 surfaces for even cooking.

---

# RECIPES

## Perfect Pancakes

This is a great all-purpose pancake recipe to have up your sleeve for breakfast next weekend. It can be dressed up by mixing in fresh or frozen fruit, or nuts and chocolate chips.

Griddler® Deluxe Cooking Position: Flat  
Plate Side: Griddle

Makes about twelve 4-inch pancakes

- 2 large eggs
- ¾ cup (180 ml) reduced-fat milk
- ½ teaspoon (12.5 ml) pure vanilla extract
- 1 cup (250 ml) plus 2 tablespoons (30 ml) unbleached, all-purpose flour
- 1 tablespoon (15 ml) baking powder
- 1 tablespoon (15 ml) granulated sugar
- ½ teaspoon (2.5 ml) table salt
- 2 tablespoons (30 ml) unsalted butter, melted and cooled (plus more for griddle plates if desired)

1. Fit the Griddler® Deluxe with the griddle plates and preheat both plates to 350°F (180°C).
2. Put the eggs, milk and vanilla in a small bowl and whisk to blend until smooth; reserve. Combine flour, baking powder, sugar and salt in a medium bowl. Stir with a whisk to blend. Add the egg/milk mixture and stir until just blended. Stir in the melted, cooled butter. Do not over-mix, or pancakes will be thin and tough – batter should be a bit lumpy.
3. Using a ¼-cup (60ml) measure, drop batter onto preheated griddle (if you like extra-buttery pancakes, put about ½ tablespoon [7ml] of butter on each plate and melt before dropping batter on plates). Cook pancakes until bubbles form, about 2 to 3 minutes; flip and cook until done, about 2 minutes longer.
4. Transfer to warm plates to serve. As you finish each batch of pancakes, you can keep them warm on a wire rack placed on a baking sheet in a low oven (200°F [100°C]). Repeat until all the batter is used.

*Nutritional information per serving (2 pancakes):*  
Calories 150 (35% from fat) • carb. 20g • pro. 4g • fat 6g • sat. fat 3g  
• chol. 74mg • sod. 453mg • calc. 83mg • fiber 0g

## Crab Cakes

Fresh crab is ideal, but high-quality canned or frozen crab works well too.

Griddler® Deluxe Cooking Position: Flat  
Plate Side: Griddle

Makes 16 crab cakes

- 1 pound (450g) lump crabmeat
- 1 large red bell pepper, finely chopped
- 1 jalapeño, seeded and finely chopped
- 4 green onions (including some of the flavorful green part), chopped
- 1 garlic clove, peeled and finely chopped



- 
- ¼ teaspoon (1 ml) kosher salt
  - 1 large egg, lightly beaten
  - 1½ cups (375 ml) panko (Japanese-style breadcrumbs), plus ½ cup (125 ml) for dredging
  - ½ cup (125 ml) mayonnaise
  - 1 teaspoon (5ml) Worcestershire sauce
  - 1 teaspoon (5 ml) Dijon mustard
  - 1½ teaspoons (7 ml) Old Bay® seasoning
  - hot sauce, to taste (optional)
  - vegetable oil, for brushing the griddle
  - lemon wedges, for serving

1. Pick through crabmeat to make sure there are no shells or cartilage, being careful not to tear the meat into small pieces. Reserve in refrigerator.
2. In a medium to large bowl, mix the peppers, green onions, garlic, salt, egg, 1½ cups (375ml) of the panko, mayonnaise, Worcestershire, Dijon, Old Bay and hot sauce (if using). Add the crabmeat and very gently mix all of the ingredients together (it is best to do this with clean hands to avoid over-mixing, but you can do it with a spoon if you are careful to keep the crabmeat intact).
3. Using your hands, shape the mixture into ¼-cup (60ml) round cakes (no higher than ½-inch [1.25cm]) and put them on a clean plate, separating the layers with wax paper. Cover with plastic and refrigerate for 1 hour before cooking (this helps keep the crab cakes together when cooking and melds the flavors).
4. Fit the Griddler® Deluxe with the griddle plates and preheat both plates to 400°F (200°C). Brush the plates with a little vegetable oil (this will help to crisp and lightly brown the crab cakes).
5. While the unit is preheating, lightly dredge the crab cakes in the remaining panko.
6. When the griddle is hot, cook the crab cakes in batches, approximately 8 minutes per side. Crab cakes should be a deep golden brown on both sides.
7. Serve immediately with lemon wedges.

*Nutritional information per crab cake:*  
Calories 119 (5% from fat) • carb. 5g • pro. 4g • fat. 9g • sat. fat 1g  
• chol. 41mg • sod. 278mg • calc. 29mg • fiber 0g

## Classic Tomato Bruschetta

The Griddler® Deluxe's independently heated plates make the perfect bruschetta easy, keeping bread warm on the bottom while melting cheese on top.

Griddler® Deluxe Cooking Position: Flat and Closed  
Plate Side: Grill

Makes 16 bruschetta

- 16 slices (½-inch [1.25 cm] thick) French bread (baguette)
- 4 tablespoons (60 ml) extra virgin olive oil, divided, plus 1 teaspoon (5 ml)
- 1 pint grape tomatoes, quartered (about 1½ cups [375 ml])
- ½ teaspoon (2.5 ml) kosher salt
- ¼ teaspoon (1 ml) freshly ground black pepper
- 6 small garlic cloves, chopped
- 3 medium fresh basil leaves, thinly sliced (chiffonade)
- ½ ounce (14 g) Parmesan, grated or finely shredded

- 
1. Fit the Griddler® Deluxe with the grill plates and preheat both plates to 450°F (230°C).
  2. Using 2 tablespoons (30 ml) of the oil, brush all the bread on both sides. Once the unit has preheated, put all pieces of oiled bread onto the hot plates and grill about 3 to 5 minutes per side, until lightly browned.
  3. While bread is grilling, prepare topping. In a small bowl, stir together the tomatoes, salt, pepper, garlic and basil with the remaining oil.
  4. Keeping the upper plate at 450°F (230°C), reduce the lower plate to Warm. Move all toasted bread to the lower plate and distribute the tomato mixture evenly on each piece, then top with the Parmesan. Setting the cover height adjuster at the highest notch, close the upper plate until it is sitting just above the Parmesan, but not touching it. Let the bruschetta cook until the cheese is just melted, about 5 minutes.
  5. Serve immediately.

*Nutritional information per bruschetta:*  
Calories 67 (34% from fat) • carb. 9g • pro. 2g • fat 3g • sat. fat 1g  
• chol. 1mg • sod. 138mg • calc. 21mg • fiber 1g

## The All-American Burger

Start with the best beef you can find, then simply season, grill, top with blue cheese, and finish cooking. The Cuisinart® Griddler® Deluxe does it all!

Griddler® Deluxe Position: Closed  
Plate Side: Grill

Makes 6 servings

- 2 pounds (900 g) ground beef round or chuck (freshly ground if possible)
- 1½ teaspoons (7 ml) kosher salt
- ¾ teaspoon (4 ml) freshly ground black pepper
- ½ teaspoon (2.5 ml) garlic powder
- 3 tablespoons (45 ml) crumbled blue cheese, divided
- 6 hamburger buns, for serving

1. Fit the Griddler® Deluxe with the grill plates and preheat both plates to 450°F (230°C).
2. Working the ground chuck as little as possible, mix in a large bowl with the salt, pepper and garlic powder. Shape into 6 patties, about 4 inches (10 cm) in diameter. The best way to do this is to use a 4-inch [10cm] round cookie cutter: Divide meat equally into six portions, put each into the cookie cutter and gently press to evenly fill. All burgers should be the same thickness for optimal results. Use your thumb to press a dimple into the center of each patty.
3. When the unit has preheated, place the burgers on the lower grill plate, evenly spaced. Using the cover height adjuster, close the upper plate so the hinge is set to the position where the upper grill plate is just sitting on the burgers without pressing them.
4. Contact grill for 5 minutes for rare burgers (this will result in a medium-rare burger by the end of cooking). Then open the unit and top with the blue cheese, ½ tablespoon (7 ml) per burger. Setting the cover height adjuster, close the upper grill plate so it is sitting over the blue cheese but not touching it. Grill for an additional 2 minutes, or until the cheese is just melted.
5. Remove burgers and serve immediately.

---

NOTE: For toasted buns, halve the buns and grill in the Closed position, using the cover height adjuster so that the upper plate is just touching the tops of the buns. Grill for about 30 seconds right after finishing burgers.

*Nutritional information per burger:*  
Calories 283 (54% from fat) • carb. 0g • pro. 31g • fat 16g • sat. fat 7g  
• chol. 101mg • sod. 549mg • calc. 42mg • fiber 0g

## Open-Faced Turkey Sandwich

A simple and delicious sandwich to celebrate autumn – but can easily be enjoyed year round.

Griddler® Deluxe Cooking Position: Closed  
Plate Side: Grill

Makes 4 servings

- 4 slices whole grain or multigrain bread
- 2 tablespoons (30 ml) whole grain Dijon mustard
- 2 tablespoons (30 ml) fig jam
- 12 ounces (340 g) sliced turkey
- 1 large Granny Smith apple, cored and thinly sliced
- 6 ounces (170 g) sliced sharp Cheddar

1. Fit the Griddler® Deluxe with the grill plates and preheat the top plate to 450°F (230°C) and the bottom plate to 350°F (170°C).
2. While the grill is preheating, spread 1/2 tablespoon (7 ml) each of the mustard and fig jam on top of each slice of bread. Evenly divide the turkey, sliced apple and then the Cheddar on top of each piece of bread.
3. When the unit is ready, place the sandwiches on the lower grill plate. Using the cover height adjuster, close the upper plate so the hinge is set to the position where the upper grill plate sitting just above the cheese but not touching it.
4. Cook sandwiches for 5 to 7 minutes, or until cheese is melted.

*Nutritional information per sandwich:*  
Calories 413 (40% from fat) • carb. 34g • pro. 29g • fat 14g • sat. fat 9g  
• chol. 82mg • sod. 1499mg • calc. 355mg • fiber 5g

## Fish Tacos

Need a fun dinner party idea? Set up a make-your-own taco bar with all of the fixings! It's little work for the host, so you can enjoy these light and simple tacos with your guests.

Griddler® Deluxe Cooking Position: Flat  
Plate Side: Grill

Makes 8 tacos

### **Fish:**

- 1¼ pounds (670 g) fish fillet (snapper or similar type fish), about 1-inch (2.5 cm) thick
- ¼ cup (60 ml) olive oil
- 3 tablespoons (45 ml) fresh lime juice
- ¼ teaspoon (1 ml) chili powder
- ½ teaspoon (2.5 ml) kosher salt
- ½ jalapeño, halved, seeded and thinly sliced
- 2 tablespoons (30 ml) chopped cilantro

---

**Tacos:**

- 2 cups (500 ml) shredded cabbage, about ¼ small to medium head
- 2 teaspoons (10 ml) vegetable oil
- 1¼ teaspoons (6 ml) kosher salt
- pinch freshly ground black pepper
- juice of one lime
- 1 tablespoon (15 ml) chopped fresh cilantro, plus more for serving
- 8 6-inch (15 cm) corn tortillas
- ½ avocado, sliced
- hot sauce, to taste
- lime wedges, for serving

1. Put all of the fish ingredients in a shallow glass baking dish, turning fish once or twice to fully coat. Cover and marinate for about 30 minutes.
2. While fish is marinating, put the shredded cabbage, oil, salt, pepper, lime juice and chopped cilantro in a mixing bowl. Toss to combine; reserve.
3. When fish is just about done marinating, fit the Griddler® Deluxe with the grill plates and preheat both plates to 400°F (200°C).
4. Remove fish from marinade, place on preheated grill plates and grill for 2 to 4 minutes on each side, depending on the thickness of the fish. Remove and reserve. Lower the temperature of both the upper and lower plates to Warm.

Assemble Tacos: Place tortillas on the grill plates to warm. Remove when warmed through and evenly divide the grilled fish among the tacos, topping them with the cabbage slaw, and then the avocado. Add a little hot sauce and a squeeze of lime.

*Nutritional information per serving:*

*Calories 193 (32% from fat) • carb. 17g • pro. 16g • fat 7g • sat. fat 1g  
• chol. 26mg • sod. 185mg • calc. 34mg • fiber 2g*

## Grilled Vegetables

As a side dish or served over a mixed green salad, grilled vegetables never disappoint!

Griddler® Deluxe Cooking Position: Flat  
Plate Side: Grill

Makes 4 to 6 servings

- ½ medium to large eggplant, cut into ¼-inch (7 mm)-thick slices
- 1 medium red or yellow pepper, quartered and cut into ¼-inch (7 mm) slices
- 1 small to medium summer squash or zucchini, cut into ¼-inch (7 mm) rounds
- 8 asparagus spears, trimmed and halved lengthwise
- 2 garlic cloves, peeled and smashed
- 3 tablespoons (45 ml) olive oil
- ½ teaspoon (2.5 ml) kosher salt
- pinch freshly ground black pepper
- 2 sprigs fresh thyme

1. Fit the Griddler® Deluxe with the grill plates and preheat both plates to 400°F (200°C).
2. While the unit is preheating, toss all of the ingredients together. Once hot, put the vegetables on the grill. Tossing occasionally, cook until grill marks are visible and vegetables are tender, about 25 to 30 minutes.

3. Remove and serve immediately.

*Nutritional information per serving (based on 6 servings):  
Calories 86 (70% from fat) • carb. 5g • pro. 1g • fat 7g • sat. fat 1g  
• chol. 0mg • sod. 134mg • calc. 17mg • fiber 3g*

## The Perfect Combination: Grilled Potato “Chips” and Onion Rings

Whether served with a perfectly seared steak (page 15) or our All-American Burger (page 20), onion rings and “chips” make the meal.

Griddler® Deluxe Cooking Position: Flat  
Plate Side: Griddle/Grill

Makes 6 servings

### Grilled Potato “Chips”:

- $\frac{3}{4}$  pound (340 g) red potatoes, scrubbed and very thinly sliced
- 1 tablespoon (15 ml) extra virgin olive oil
- $\frac{1}{2}$  teaspoon (2.5 ml) sea or kosher salt
- pinch freshly ground black pepper

### Onion Rings:

- 1 large onion, cut into  $\frac{1}{3}$  to  $\frac{1}{2}$ -inch (80 mm to 125 mm) slices
- 1 tablespoon (15 ml) extra virgin olive oil
- $\frac{1}{4}$  teaspoon (1 ml) sea or kosher salt
- $\frac{1}{8}$  teaspoon (0.5 ml) freshly ground black pepper
- $\frac{1}{8}$  teaspoon (0.5 ml) paprika

1. Fit the Griddler® Deluxe with one grill and one griddle plate and preheat both to 450°F (220°C).
2. While the unit is preheating, put all of the “chips” ingredients into one mixing bowl and toss, and all of the onion rings ingredients into a separate bowl and toss.
3. Once the unit has preheated, place the potatoes on the hot griddle side and the onions on the hot grill side.
4. The potatoes will take about 8 to 10 minutes per side – you want them to be very crispy so you may have to grill in batches in single layers. The onions will take about 5 minutes per side, or until grill marks are well defined.
5. Remove and serve immediately, sprinkling with more salt if desired.

*Nutritional information per serving:  
Calories 50 (80% from fat) • carb. 2g • pro. 0g • fat 5g • sat. fat 1g  
• chol. 0mg • sod. 196mg • calc. 6mg • fiber 0g*

## Garlic and Herb Marinated Lamb Chops

Pull out all the stops with this gourmet dish. These lamb chops make a great special-occasion dinner paired with grilled vegetables and potatoes.

Griddler® Deluxe Cooking Position: Flat  
Plate Side: Grill

Makes 4 to 6 servings

- 1 to 2 garlic cloves, peeled and finely chopped
- 1 tablespoon (15 ml) fresh rosemary, chopped
- ¼ teaspoon (1 ml) freshly ground black pepper
- ¼ cup (60 ml) olive oil
- 1¾ to 2 pounds (800 to 900 g) loin lamb chops, approximately 6 chops
- ½ teaspoon (2.5 ml) kosher salt

1. Combine the garlic, rosemary, black pepper and olive oil in a medium stainless bowl. Place chops in marinade to coat all sides. Scrape out the remaining marinade with a rubber spatula and drizzle over the chops and refrigerate for up to 24 hours.
2. One hour before grilling, remove chops from refrigerator so they can come to room temperature.
3. Fit the Griddler® Deluxe with the grill plates and preheat both plates to 425°F. Then, set both plates to SEAR. Sprinkle salt on both sides of lamb chops.
4. When the unit has preheated, place the lamb chops evenly spaced across the lower plate. Using the cover height adjuster, carefully close the upper grill plate so the plate is just touching the top of the chops (this is so the juices are not pressed out of the lamb). Grill for two minutes on SEAR and then about 4 to 6 minutes on 425°F for medium rare.

*Nutritional information per serving (based on 6 servings):*  
*Calories 358 (72% from fat) • carb. 1g • pro. 24g • fat 28g • sat. fat 10g*  
*• chol. 87mg • sod. 208mg • calc. 18mg • fiber 0g*

## Teriyaki Glazed Salmon

Grilled salmon makes a beautiful presentation, whether on top of a salad or alongside some grilled vegetables.

Griddler® Deluxe Cooking Position: Closed  
 Plate Side: Grill

Makes 4 servings

- 1 cup (250 ml) soy sauce, reduced sodium
- ¼ cup (60 ml) mirin (Japanese rice wine)
- 3 tablespoons (45 ml) packed light brown sugar
- 3 small garlic cloves, grated (will come to about 1 teaspoon [5 ml] after grating)
- 1 ½-inch (1.25 cm) piece fresh ginger, peeled and grated
- 1 medium orange, zested and then half juiced (about 1 teaspoon [5 ml] zest, ¼ cup [60 ml] juice)
- 2 tablespoons (30 ml) sesame oil
- 1 scallion, trimmed and cut into 2-inch (5 cm) pieces
- 2 pounds (900 g) salmon fillet (or four 8-oz [225 g] fillets)
- ¼ teaspoon (1 ml) kosher salt
- ½ tablespoon (7 ml) olive oil
- ¼ teaspoon (1 ml) sesame seeds, for serving

1. In a small saucepan, combine the soy sauce, mirin, brown sugar, garlic, ginger, zest, juice, sesame oil and scallion. Set over medium heat and bring to a boil. Allow to cook until mixture is reduced by about half and the liquid has become thick and syrupy – this should take around 20 minutes, depending on the stove being used. Set aside to cool slightly.

- 
2. Fit the Griddler® Deluxe with the grill plates and preheat both plates to 400°F (200°C). While grill is preheating, season the salmon with the salt and brush with oil on both sides of the fish.
  3. Place the salmon on the lower grill plate, flesh side down. Cook for 4 to 5 minutes, until the edges are cooked (interior of fish will only be cooked about halfway through at this point). Flip the fish and then brush with some of the reserved glaze. Using the cover height adjuster, carefully close the upper grill plate so the plate is just above the top of the fish, but not touching it. Grill until cooked through, an additional 4 to 5 minutes (flesh will flake away with a fork, but still be bright pink inside).
  4. With about 1 minute remaining, open the grill and brush the top of the fish with more of the glaze and then flip to cook an additional minute. Remove and serve immediately, brushing with more glaze and sprinkling with the sesame seeds.

*Nutritional information per serving:*

*Calories 508 (39% from fat) • carb. 27g • pro. 53g • fat 23g • sat. fat 3g  
• chol. 125mg • sod. 2329mg • calc. 37mg • fiber 0g*

## Rib-Eye Steaks

The Cuisinart® Griddler® Deluxe sears steaks to perfection. Use our grilling guide on page 8 to cook steaks just the way you and your family like them, from rare to well done.

Griddler® Deluxe Cooking Position: Closed  
Plate Side: Grill

Makes 2 steaks

- 2 rib-eye steaks, 1 to 2 inches (2.5 to 5 cm) thick
- 2 teaspoons (10 ml) olive oil
- ½ teaspoon (2.5 ml) kosher salt
- ¼ teaspoon (1 ml) freshly ground black pepper

1. Marinate the steaks in the olive oil, salt and pepper for at least 1 hour.
2. Fit the Griddler® Deluxe with the grill plates and preheat both plates to 450°F (220°C), then set both plates to SEAR.
3. Place the marinated steaks on the lower grill plate. Close the unit and using the cover height adjuster, adjusting the upper plate so it is just resting on the top of the steaks. Allow to grill for 2 minutes on SEAR with an additional 1 to 2 minutes at 450°F (220°C), if using 1-inch (2.5 cm) steaks for rare, or an additional 3 to 4 minutes for medium rare. (Refer to the Steak Chart on page 8 for more specific grilling times.)
4. Allow steaks to rest for at least 5 minutes, and then serve with any of the following options.

*Nutritional information per serving:*

*Calories 331 (35% from fat) • carb. 0g • pro. 52g • fat 12g • sat. fat 3g  
• chol. 136mg • sod. 699mg • calc. 46mg • fiber 0g*

---

# Compound Herb Butter

A bit of this butter on top of a hot steak takes it to the next level.  
Also put a pat of the butter inside a burger before grilling for extra richness and flavor.

Makes ½ cup (125 ml)

- 1 small garlic clove, peeled
- ½ tablespoon (7 ml) fresh oregano
- 1 sprig of thyme, leaves only (stems discarded)
- 2 chives, cut into 1-inch (2.5 cm) pieces
- ½ teaspoon (2.5 ml) kosher salt
- 1 stick good quality butter, room temperature

1. In a small food processor or chopper, chop the garlic, oregano, thyme and chives. Scrape down the sides of the work bowl and add the salt and butter. Process until completely smooth.
2. Place butter onto a piece of plastic wrap and roll into the shape of a log, twisting the ends of the plastic to seal. Chill well.
3. Slice and put on top of grilled steaks prior to serving.

*Nutritional information per serving:*  
*Calories 51 (99% from fat) • carb. 0g • pro. 0g • fat 6g • sat. fat 4g*  
*• chol. 15mg • sod. 49mg • calc. 2mg • fiber 0g*







---

# WARRANTY

## LIMITED THREE-YEAR WARRANTY

We warrant that this Cuisinart product will be free of defects in materials or workmanship under normal home use for 3 years from the date of original purchase. This warranty covers manufacturer's defects including mechanical and electrical defects. It does not cover damage from consumer abuse, unauthorized repairs or modifications, theft, misuse, or damage due to transportation or environmental conditions.

Products with removed or altered identification numbers will not be covered. This warranty is not available to retailers or other commercial purchasers or owners. If your Cuisinart product should prove to be defective within the warranty period, we will repair it or replace it if necessary. For warranty purposes, please register your product online at [www.cuisinart.ca](http://www.cuisinart.ca) to facilitate verification of the date of original purchase and keep your original receipt for the duration of the limited warranty. This warranty excludes damage caused by accident, misuse or abuse, including damage caused by overheating, and it does not apply to scratches, stains, discolouration or other damage to external or internal surfaces that does not impair the functional utility of the product. This warranty also expressly excludes all incidental or consequential damages.

Your Cuisinart product has been manufactured to the strictest specifications and has been designed for use only in 120 volt outlets and only with authorized accessories and replacement parts.

This warranty expressly excludes any defects or damages caused by attempted use of this unit with a converter, as well as use with accessories, replacement parts or repair service other than those authorized by Cuisinart.

If the appliance should become defective within the warranty period, do not return the appliance to the store. Please contact our Customer Service Centre:

**Toll-free phone number:**  
1-800-472-7606

### Address:

Cuisinart Canada  
100 Conair Parkway  
Woodbridge, Ont. L4H 0L2

### Email:

[consumer\\_Canada@conair.com](mailto:consumer_Canada@conair.com)

### Model:

GR-150C

To facilitate the speed and accuracy of your return, please enclose:

- \$10.00 for shipping and handling of the product (cheque or money order)
- Return address and phone number
- Description of the product defect
- Product date code\*/copy of original proof of purchase
- Any other information pertinent to the product's return

\* Product date code can be found on the underside of the base of the product. The product date code is a 4 or 5 digit number. Example, 90630 would designate year, month & day (2009, June 30th).

**Note:** We recommend you use a traceable, insured delivery service for added protection. Cuisinart will not be held responsible for in-transit damage or for packages that are not delivered to us.

To order replacement parts or accessories, call our Customer Service Centre at 1-800-472-7606.

For more information, please visit our website at [www.cuisinart.ca](http://www.cuisinart.ca)

# Cuisinart<sup>®</sup> MD



Coffeemakers  
Cafetières



Blenders  
Mélangeurs



Juicers  
Presse-agrumes



Cookware  
Ustensiles  
de cuisson



Tools and  
Gadgets  
Outils et  
accessoires

Cuisinart offers an extensive assortment of top quality products to make life in the kitchen easier than ever. Try some of our other countertop appliances and cookware.

Cuisinart<sup>MD</sup> offre une vaste gamme de produits de grande qualité qui facilitent la vie dans la cuisine comme jamais auparavant. Essayez nos autres appareils de comptoir, nos ustensiles de cuisson et nos outils et accessoires de cuisine.

**[www.cuisinart.ca](http://www.cuisinart.ca)**

©2013 Cuisinart Canada

100 Conair Parkway,  
Woodbridge, Ontario L4H 0L2

Printed in China/  
Imprimé en Chine

Trademarks or service marks of third parties referred to herein are the trademarks or service marks of their respective owners.

Toutes les autres marques de commerce ou de service utilisées dans le présent document sont les marques de leurs propriétaires respectifs.

13CC142103

IB-11144-CAN