

Cuisinart®



**Grind Central™
Stainless Coffee
Grinder**

DCG-12BCC

For your safety and continued enjoyment of this product,
always read the instruction book carefully before using.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. **READ ALL INSTRUCTIONS.**
2. **Unplug from outlet when not in use, before putting on or taking off parts, before removing coffee and before cleaning.**
3. To protect against risk of electrical shock, do not immerse cord, plug or grinder in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Avoid contacting moving parts.
6. Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions, or is dropped or damaged in any manner.
7. The use of attachments not recommended or sold by Cuisinart may cause fire, electrical shock, or risk of injury.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter, or touch hot surfaces.
10. Check hopper for presence of foreign objects before using.
11. Do not use appliance for other than intended use.
12. Do not operate your appliance in an appliance garage or under a wall cabinet. When storing in an appliance garage always unplug the unit from the electrical outlet. Not doing so could create a risk of fire, especially if the appliance touches the walls of the garage or the door touches the unit as it closes.


SAVE THESE INSTRUCTIONS

NOTICE: This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not modify the plug in any way.

OPERATING INSTRUCTIONS

1. Plug cord into outlet.
2. Remove lid from base of grinder.
3. Fill stainless steel bowl with desired quantity of beans. Use measurements markings in bowl to measure beans. Do not fill beans above the rim of the stainless steel bowl as over filling could result in poor grinding or motor failure.
4. Make sure the grinding bowl is in the locked position, then place the lid onto grinder base.
5. Press and hold on/off button to begin grinding. Please note: A safety feature of this grinder does not allow it to operate unless the lid is in place.
6. Grind until beans are ground to desired consistency. To stop grinding, release pressure from on/off button.
7. Remove plug from outlet.
8. Measure coffee as desired. See measurement suggestions on reverse.
9. To store unused ground coffee, remove grinding bowl and cover with storage lid. Refrigerate.

FOR HOUSEHOLD USE ONLY

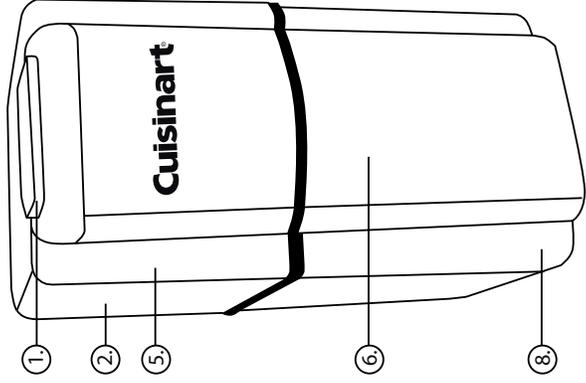

1. On/Off Button
2. Cover
3. Stainless Steel Blades (not shown)
4. Measurement Markings (not shown)
5. Stainless Steel Removable Bowl
6. Grinder Base
7. Storage Lid (not shown)
8. Cord Storage
9. BPA Free (not shown)

MEASUREMENT SUGGESTIONS:

For the richest coffee flavour, we suggest using one rounded tablespoon (15 ml) of ground coffee for every 5 ounces (148 ml) of water. The measurement markings in the grinder bowl indicate reference measurements. Fill beans to the marking level indicated by number of cups desired.

For example, when making automatic drip coffee, if you fill the bowl with beans to the 12 cup marking, you will have enough ground coffee for 12 cups. Filling the bowl to the top will give you the maximum 18 cups, but be careful not to overflow as this will result in poor grinding or motor failure.

Note: These markings are approximate. Experiment with different quantities to determine what works best.

GRINDING SUGGESTIONS:

Some general guidelines for grinding are listed below. However, times will vary depending upon the amount of coffee used and your personal preference. To determine the right grind consistencies, experiment with different grinds and coffee types to suit your taste.

Grind	Suggested Use	Grind Time*
Coarse	Percolator/ French Press	20 Seconds
Medium	Automatic Drip	30 Seconds
Fine	Espresso	40 Seconds

* based on full capacity

CLEANING AND MAINTENANCE

1. Be sure that grinder plug has been removed from outlet.
2. All removable parts are dishwasher safe on the top rack. Do not put parts on bottom shelf. Never immerse the grinder base unit in water or other liquid.
3. Store excess cord by pushing a section at a time into the cord storage area in the base of the unit.

Maintenance: Any other servicing should be performed by an authorized service representative.

WARRANTY

LIMITED 18-MONTH WARRANTY

We warrant that this Cuisinart product will be free of defects in materials or workmanship under normal home use for 18-month from the date of original purchase. This warranty covers manufacturer's defects including mechanical and electrical defects. It does not cover damage from consumer abuse, unauthorized repairs or modifications, theft, misuse, or damage due to transportation or environmental conditions. Products with removed or altered identification numbers will not be covered.

This warranty is not available to retailers or other commercial purchasers or owners. If your Cuisinart product should prove to be defective within the warranty period, we will repair it or replace it if necessary. For warranty purposes, please register your product online at www.cuisinart.ca to facilitate verification of the date of original purchase and keep your original receipt for the duration of the limited warranty.

This warranty excludes damage caused by accident, misuse or abuse, including damage caused by overheating, and it does not apply to scratches, stains, discolouration or other damage to external or internal surfaces that does not impair the functional utility of the product. This warranty also expressly excludes all incidental or consequential damages.

Your Cuisinart product has been manufactured to the strictest specifications and has been designed for use only in 120 volt outlets and only with authorized accessories and replacement parts. This warranty expressly excludes any defects or damages caused by attempted use of this unit with a converter, as well as use with accessories, replacement parts or repair service other than those authorized by Cuisinart.

If the appliance should become defective within the warranty period, do not return the appliance to the store. Please contact our Customer

Service Centre:

Toll-free phone number:
1-800-472-7606

Address:
Cuisinart Canada
100 Conair Parkway
Woodbridge, Ont. L4H 0L2

Email:
consumer_Canada@conair.com

Model:
DCG-12BCC

To facilitate the speed and accuracy of your return, please enclose:

- \$10.00 for shipping and handling of the product (cheque or money order)
 - Return address and phone number
 - Description of the product defect
 - Product date code*/copy of original proof of purchase
 - Any other information pertinent to the product's return
- * Product date code can be found on the underside of the base of the product. The product date code is a 4 or 5 digit number.Example, 120630 would designate year, month & day (2012, June 30th).

Note: We recommend you use a traceable, insured delivery service for added protection. Cuisinart will not be held responsible for in-transit damage or for packages that are not delivered to us.

To order replacement parts or accessories, call our Customer Service Centre at 1-800-472-7606. For more information, please visit our website at www.cuisinart.ca

Cuisinart[®] MD



Food Processors
Robots culinaires



Stand Mixers
Batteurs sur socle



Rice Cookers
Cuiseurs à riz

Cuisinart offers an extensive assortment of top quality products to make life in the kitchen easier than ever.

Try some of our other countertop appliances and cookware, and Savor the Good Life[™].

Découvrez la gamme complète d'appareils électroménagers haut de gamme Cuisinart^{MD} qui comprend les robots de pleine taille, mini robots, mélangeurs, grille-pain, cafetières et fours grilloirs sur notre site

www.cuisinart.ca

©2013 Cuisinart Canada

100 Conair Parkway

Woodbridge, Ont L4H 0L2

Visit our Website:/ Visitez notre site Web :

www.cuisinart.ca

Consumer Call Centre Email:/ Courriel centre

au consommateur : Consumer_Canada@Conair.com

1-800-472-7606

Printed in China/ Imprimé en Chine

10CUI-C026

IB-4557-CAN-E