

LIMITED LIFETIME WARRANTY

Your Cuisinart® Cookware is warranted to be free of defects in material and workmanship under normal home use from the date of original purchase throughout the original purchaser's lifetime.

We recommend that you visit our website, www.cuisinart.ca for a fast, efficient way to complete your product registration. However, product registration does not eliminate the need for the consumer to maintain the original proof of purchase in order to obtain the warranty benefits.

If your cookware should prove to be defective within your lifetime, we will repair it (or, if we think it necessary, replace it) without charge to you, except for shipping and handling. To obtain warranty service, please call our Consumer Service Centre toll-free at **1-800-472-7606**. Or write to **Consumer Service Centre, Cuisinart, 100 Conair Parkway, Woodbridge, Ontario, L4H 0L2. E-mail: Consumer_Canada@Conair.com**

To facilitate the speed and accuracy of your return, please enclose \$10.00 for shipping and handling of the product, along with proof of purchase. Please also be sure to include a return address, description of the product problem, phone number, and any other information pertinent to the product's return. Please pay by cheque or money order. Please note the party to whom the check or money order should be made payable to Conair Canada.

NOTE: For added protection and secure handling of any Cuisinart® product that is being returned, we recommend you use a traceable, insured delivery service. Cuisinart cannot be held responsible for in-transit damage or for packages that are not delivered to us. Lost and/or damaged products are not covered under warranty.

This warranty excludes damage caused by accident, misuse or abuse, including damage caused by overheating, and it does not apply to scratches, stains, discolouration, minor imperfections, slight colour variations or other damage to external or internal surfaces which does not impair the functional utility of the cookware. This warranty also expressly excludes all incidental or consequential damages.

© 2019 Cuisinart Canada,
100 Conair Parkway, Woodbridge, ON L4H 0L2
Printed in China • 19CC034834

Visit our Website:
www.cuisinart.ca
Consumer Call Centre Email:
Consumer_Canada@Conair.com

IB-16547-CAN

Cuisinart

ELITE COLLECTION®

NESTING STAINLESS STEEL COOKWARE SET



USE AND CARE GUIDE

STAINLESS STEEL NESTING COOKWARE SET

Cuisinart® Stainless Steel Nesting Cookware is an investment that will prove its worth every time you use it. Exclusive designed aluminum encapsulated base provides superior heat conductivity and even heat distribution to meet the demands of gourmet chefs everywhere. When properly cared for, your Cuisinart® Stainless Steel Nesting Cookware will give countless years of service and pleasure. Follow the use and care suggestions in this leaflet to preserve and maintain cookware's original beauty.

■ ESSENTIAL PRECAUTIONS

Never use Cuisinart® Stainless Steel Nesting Cookware on high heat.

Food will burn. The aluminum encapsulated base of this cookware is highly conductive and efficient for quick, even heat distribution. We recommend using a low to medium setting for most cooking. To boil water, medium-high is sufficient. Never leave Cuisinart® Cookware or any pan empty over a hot burner. Doing so can ruin the pan and cause damage to the stovetop. Any material, if heated continuously at a high enough temperature, will begin to decompose, damaging your stovetop or cookware and/or causing personal injury. Never leave cookware on the stovetop unattended. Do not allow cookware to boils dry, do not remove from the stove immediately. Turn off the heat and allow to cool naturally.

■ BEFORE USING

Wash your new cookware in hot water with a mild soap or dish detergent, or in a dishwasher, before using for the first time. Rinse thoroughly and wipe dry immediately with a soft dish towel, or you may place your Cuisinart® Stainless Steel Nesting Cookware in a dishwasher.

■ EASY MAINTENANCE

Immediately after each use, fill the pan with hot water and liquid dish detergent; let stand until lukewarm. Use a sponge or soft cloth to remove any remaining food particles. Do not use steel wool or other metal pads that make coarse scratches. Rinse thoroughly and dry immediately for a flawless finish. Cuisinart® Stainless Steel Nesting Cookware features oven-safe handles that can withstand oven temperatures up to 500°C (260°C). Glass lids are oven safe to 350°C (180°C) only. Caution should be used when handling any cookware handles and we recommend the use of potholders.

■ WHAT ABOUT THE DISHWASHER?

Cuisinart® Stainless Steel Nesting Cookware, is dishwasher safe, but remember that soil from other dishes may be abrasive. If the dishwasher is carelessly packed, other dishes or flatware may mark the surface of the cookware. Over a long period, regular dishwasher cleaning will eventually scratch any utensil. We recommend using a non-lemon detergent.

■ WHAT ABOUT METAL UTENSILS?

We recommend using plastic or wooden utensils with your Cuisinart® Stainless Steel Nesting Cookware. You may prefer using metal utensils. These may scratch the cooking surface, but will in no way impair the performance of your Cuisinart® Stainless Steel Nesting Cookware. You may use a hand mixer with metal beaters which can scratch the interior surface but will not impair the cookware's performance or its durability.

■ TO REMOVE STAINS

Calcium in your water may leave a multicoloured stain. This is from a harmless deposit and can be removed with a little warm vinegar. Certain foods such as pasta or oatmeal may leave a light residue or cloudy appearance. This can be easily removed with any non-abrasive cleaning product.

■ TO REMOVE STUBBORN RESIDUE

When food is burned in the pan, a stubborn black residue may remain. If soaking does not loosen it, add water to a depth of one inch in the pan, then add a tablespoon (15 ml) of dishwasher detergent (a non-lemon product). Bring to a boil, reduce heat and simmer for 15 minutes. Let cool in the pan, then drain and rinse. Loosen the residue with a sponge or plastic spatula. Repeat if necessary.

■ TO REMOVE BURNER STAINS

Stains on the outside bottom (not sides) of pans can be removed with an oven cleaner. Follow the manufacturer's directions and spray or brush the cleaner on only the outside bottom of the pan. If the directions call for using the cleaner in a warm oven, heat the pan before applying the cleaner. Rinse thoroughly after cleaning.

CAUTION: Detergent fumes can be irritating. Carry out this procedure under a hood with an exhaust fan or in a well ventilated room.

■ USE ON INDUCTION STOVETOPS

Please consult your induction stovetop manual for information on use. Please always center the cooking vessel on the burner for optimal performance.

■ COOKING ON A GLASS STOVETOP

To avoid scratching a glass cooktop, do not slide cookware on the glass surface. Please consult your glass cooktop manual for information and recommendations on use.

■ COOKING OVER A GAS BURNER

When cooking over a gas burner, make certain the flame touches only the pan bottom. If the flame comes up the sides of the pan, energy is wasted and the sides of the pan may become permanently discoloured.

IMPORTANT NOTE: Cuisinart® Stainless Steel Nesting Cookware has exceptionally high thermoconductivity, and even a low setting on some gas burners will overheat or even burn foods such as thinly sliced onions. An inexpensive gas flame-tamer placed between the burner and the bottom of the pot solves this problem. Flame-tamers are readily available at most hardware stores.

■ COOKING TEMPERATURE IN OVEN

Cuisinart® Stainless Steel Nesting Cookware can be used in the oven without damage. Naturally, the handle as well as the pan will become hot. Use potholders to prevent burns. The cookware can be used in the oven at any baking temperature up to 500°F (260°C) and can go from burner to broiler to table when placed on a heat-resistant trivet. Glass lids are oven safe to 350°F (180°C) only.

■ TO BREAK A VACUUM SEAL

The uniquely designed rims and covers form a perfect fit to reduce the evaporation of liquids. If you leave the cover on after turning the heat down or off, a partial vacuum may form, which will seal the lid to the pan. To break the seal, turn on the heat for a few moments, and the cover will come off easily. If you don't want the lid to seal to the pan, remove the cover or set it slightly ajar before turning off the heat.

■ CONVENIENT STORAGE

Cuisinart® Stainless Steel Nesting Cookware provides convenient, safe storage by allowing you to neatly stack your cookware.