

## **USE AND CARE**

Before first use, wash in warm, soapy water, rinse and dry thoroughly.

Cooking: DO NOT USE ON STOVETOP BURNERS OR OTHER DIRECT HEAT SOURCES. DO NOT exceed a maximum oven temperature of 500°F (260°C). When using under the broiler, allow 6 inches between bakeware and the heat source.

Freezer to Oven: Place frozen bakeware in cold oven; allow oven and bakeware to heat up together. DO NOT PLACE FROZEN BAKEWARE IN A PREHEATED OVEN.

Cleaning: DO NOT SUBMERGE HOT BAKEWARE IN COLD WATER. Please allow bakeware to cool before cleaning. Dishwasher cleaning for everyday use. For stubborn or baked-on residue, soak in hot water and clean with soft brush or soft nylon or plastic scrubber. Do not use steel wool or other metal-type abrasive cleaning pads.

## **LIMITED LIFETIME WARRANTY (U.S. AND CANADA ONLY)**

Your Cuisinart® Chef's Classic™ Ceramic Bakeware is warranted to be free of defects in material and workmanship under normal home use from the date of original purchase throughout the original purchaser's lifetime. If your bakeware should prove to be defective within your lifetime, we will repair it (or, if we think it necessary, replace it) without charge to you, except for shipping and handling. To obtain warranty service, please call our Consumer Service Center toll-free at 1-800-472-7606, or write to Consumer Service Center, Cuisinart, 100 Conair Parkway, Woodbridge, ON L4H 0L2.

NOTE: When returning your Cuisinart product we recommend you use a traceable mail service, as Cuisinart cannot be held responsible for in-transit damage or packages that are not delivered to us. Traceable mail ensures our timely response to your return. To facilitate the speed and accuracy of your return, please also enclose \$7.00 for shipping and handling of the product. Please also be sure to include a return address, description of the product problem, phone number, and any other information pertinent to the product's return. Please pay by check or money order made payable to Cuisinart. This warranty excludes damage caused by accident, misuse or abuse, including damage caused by overheating, and it does not apply to scratches, stains, discolouration or other damage to external or internal surfaces which does not impair the functional utility of the bakeware.

This warranty also expressly excludes all incidental or consequential damages. Some provinces do not allow the exclusion or limitation of incidental or consequential damages, so the foregoing limitation or exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights, which vary from province to province.

©2017 Cuisinart Canada, 100 Conair Parkway, Woodbridge, ON L4H 0L2

Visit our Website: [www.cuisinart.ca](http://www.cuisinart.ca)

Consumer Call Centre E-mail: [Consumer\\_Canada@Conair.com](mailto:Consumer_Canada@Conair.com)