

Cuisinart®

Cool Combo Ice Cream and Snow Cone Maker

ICE-CMB10C



Instruction
Booklet

For your safety and continued enjoyment of this product,
always read the instruction book carefully before using.

Contents

Important Safeguards 2

Parts and Features 4

Before First Use 5

Operation – Ice Cream Maker 5

 Freezer Bowl Preparation 5

 Assembly 5

 How to Make Ice Cream/
 Frozen Yogurt/Sorbet 6

 Adding Mix-Ins 6

 Helpful Hints 6

Operation – Snow Cone Maker 6

 Assembly 6

 How to Make Snow Cones 7

 Helpful Hints 7

Cleaning and Maintenance 7

Troubleshooting 8

Warranty 9

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be taken, including the following:

1. **READ ALL INSTRUCTIONS BEFORE USING.**
2. To protect against risk of electric shock, do not place the cord, plug, or base of the appliance in water or other liquids.
3. This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience or knowledge, unless they are closely supervised and instructed concerning use of the appliance by a person responsible for their safety. Close supervision is necessary when any appliance is used by or near children. Children should be supervised to ensure that they do not play with the appliance.
4. Turn the appliance OFF, then unplug from outlet when not in use, before assembling or disassembling parts, and before cleaning. To unplug, grasp the plug and pull from the outlet. Never pull from the power cord.
5. Avoid contact with moving parts. Never place fingers or utensils into the Continuous-Feed Chute. NEVER TOUCH THE BLADE OF THE CRUSHING ASSEMBLY. Keep hands, hair, clothing, spatulas, and utensils away during operation to reduce risk of injury or damage to the appliance.

6. Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner. Contact the manufacturer at their customer service telephone number (in the warranty section) for information on examination, repair, and/or mechanical or electrical adjustment.
7. The use of attachments not recommended or sold by Cuisinart may cause fire, electric shock, or injury.
8. Do not use outdoors.
9. Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
10. Keep hands and utensils out of the freezer bowl while in use to reduce risk of injury or damage. Do not use sharp objects or utensils inside the freezer bowl. Use only rubber or wooden utensils when the unit is OFF.
11. This appliance is for household use only.
12. Do not place on or near a hot gas or electric burner, or in a heated oven. Do not expose the freezer bowl to heat sources. Do not wash freezer bowl in the dishwasher.
13. Do not operate the appliance in an appliance garage or under a wall cabinet. Always unplug when storing.
14. To protect against electrical hazards, do not immerse the base unit in water or other liquids.
15. Check the Continuous-Feed Chute for foreign objects before use and only when the appliance is unplugged.
16. Use only attachments included with the Cuisinart® ICE-CMB10 Cool Combo Ice Cream & Snow Cone Maker.
17. Do not use the appliance for other than its intended use.
18. Never place fingers or other utensils into feed or discharge areas.
19. Check Crushing Assembly for presence of foreign objects before using.
20. Do not attempt to defeat any safety interlock mechanisms.

SAVE THESE INSTRUCTIONS FOR HOUSEHOLD USE ONLY

Notice

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug will fit into a polarized outlet only one way. If it does not fit, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

Special Cord Set Instructions


A short power-supply cord is provided to reduce the risks resulting from entanglement or tripping. Longer extension cords may be used if care is exercised and the electrical rating of the extension cord is equal to or greater than that of the appliance.

Caution

- Do not immerse base in water.
- Do not disassemble the base; it contains no user-serviceable parts.
- Never clean with scouring powders or hard implements.

Parts and Features

- 1. Removable 1½-Quart Freezer Bowl**
Durable double-wall construction with proprietary chilling technology
 - 2. Lid with Continuous-Feed Chute and Safety Interlock**
Allows you to add ingredients to the Crushing Assembly for crushing (i.e., ice or mix-ins)
 - 3. Ingredient Funnel**
Attaches to Freezer Bowl to neatly add ice cream base mixture while the Mixing Paddle is rotating
 - 4. Two-Part Crushing Assembly**
Two interlocking chambers lock together to crush ingredients. Handle with care as it contains a sharp blade.
 - 5. Mixing Paddle**
Rotates to churn ice cream into even consistency
 - 6. On/Off Switch**
Powers the unit for both ice cream and snow cones
 - 7. Nonskid Feet**
Keeps unit steady
 - 8. Cuisinart® Ice Cube Tray with Lid**
Makes ice cubes for snow cones
- All parts that come in contact with food are BPA free.**

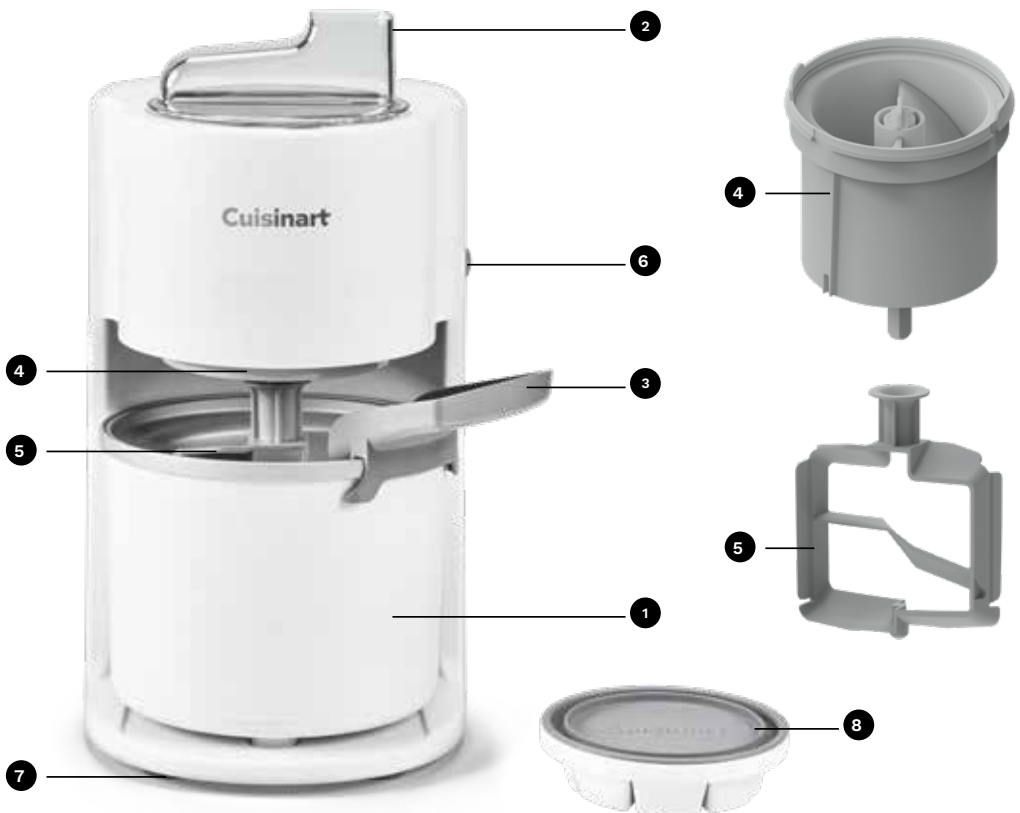

Before First Use

Carefully unpack the unit and remove all packaging materials. Wash the Freezer Bowl, Mixing Paddle, Lid, Crushing Assembly (both parts), and Ingredient Funnel in warm, soapy water. Rinse and dry thoroughly. Wipe the base with a damp cloth. Do not immerse the base in water. Handle Crushing Assembly with care, as it contains a sharp blade.

Operating Instructions – Ice Cream Maker

Freezer Bowl Preparation

Place the clean, dry Freezer Bowl upright on a flat surface in the back of the freezer at 0°F (-18°C) or below for a minimum of 24 hours. Do not tilt or invert the bowl during the freezing process. The bowl is fully frozen when there is no sloshing sound when shaken. For best results, store the bowl in the freezer so it is always ready for use.

Assembly

- Place the base on a stable, level surface with adequate overhead clearance.
- Insert the Mixing Paddle into the frozen Freezer Bowl.



- Place the Freezer Bowl onto the base, inserting the feet of the Freezer Bowl into the three indents on the base so the bowl sits flat and level.



- Install the Crushing Assembly:
- Ensure both parts of the crushing assembly are locked together by turning the middle tab according to the arrows.
- Align the rib at the front of the Crushing Assembly and the gear marking on the top of the unit.
- Align the shaft at the bottom of the Crushing Assembly with the hub at the top of the Mixing Paddle, and push the two parts together.



- Ensure the Crushing Assembly is fully seated and level.
- Place the Lid onto the unit, ensuring the safety interlock is engaged. Align the arrows on the lid with the unlock icon on the unit and turn lid to lock in place.



- Attach the Ingredient Funnel to the side of the Freezer Bowl.



NOTE: Always start the unit before adding ingredients so the Mixing Paddle is already rotating.

IMPORTANT: Do not pour liquid base mixture through the Continuous-Feed Chute.

How to Make Ice Cream/Frozen Yogurt/Sorbet

NOTE: Maximum capacity is 4 cups of base mixture, for 1½-quart maximum yield.

- Chill base mixture in the refrigerator for a minimum of 2 hours (6 to 12 hours preferred; up to 24 hours).
- Assemble the unit for ice cream making.
- Plug in and turn the unit ON so the Mixing Paddle begins rotating.
- Immediately pour the chilled mixture into the Freezer Bowl using the Ingredient Funnel.
- IMPORTANT:** Do not pour liquid base mixture through the Continuous-Feed Chute.
- Remove the Ingredient Funnel after pouring.



- Process for 15 to 20 minutes, or until thick and creamy.
- If desired, add mix-ins in the last 5 minutes of churning (see below).
- For firmer texture, transfer finished ice cream to an airtight container, and freeze for approximately 2 hours before serving.

Adding Mix-Ins

Add mix-ins (chocolate chips, nuts, firm candy, cookies, pretzels, frozen fruit) through the Continuous-Feed Chute during the last 5 minutes of churning to ensure even distribution.



Do not use fresh fruit, frozen bananas, gummy candy, syrups, or liquid ingredients as mix-ins as they will damage the Crushing Assembly.

Helpful Hints

- Pre-chill all ice cream ingredients for best results.
- Do not exceed 4 cups of base mixture for 1½-quart ice cream capacity. **NOTE:** Ice cream expands during freezing and with added mix-ins.
- Add mix-ins near the end of the churning cycle to prevent them from settling at the bottom.
- Make sure mix-ins fit easily through the Continuous Feed Chute to avoid jamming.

Operating Instructions – Snow Cone Maker

Assembly

- Place the base on a stable, level surface with adequate overhead clearance.
- Install the Crushing Assembly as described on page 5, without the Freezer Bowl or Mixing Paddle.



- Place the Lid onto the unit, ensuring the safety interlock is engaged. Align the arrows on the lid with the unlock icon on the unit and turn lid to lock in place.



- Place a container beneath the Crushing Assembly to collect the crushed ice.



How to Make Snow Cones

- Assemble the unit for snow cone making.
- Plug in and turn the unit ON.
- Feed ice cubes through the Continuous-Feed Chute.



- Collect crushed ice in a container.



- Drizzle cooled syrup or toppings over ice.



- Serve immediately.

Helpful Hints

- Make sure ice cubes fit easily through the Continuous-Feed Chute to avoid jamming.
- For best results, use ice cubes made with the included Cuisinart® Ice Cube Tray.
- Ice cubes should be fresh (not fused or wet).

Cleaning and Maintenance

- Always turn OFF and unplug the unit before cleaning.
- Hand-wash the Freezer Bowl, Mixing Paddle, Lid, Ingredient Funnel, and both parts of the Crushing Assembly in warm, soapy water. Rinse and dry thoroughly.
- Handle Crushing Assembly's blade with care when cleaning.
- Wipe the base with a damp cloth; never immerse it in water or other liquids.
- Dry all parts completely before storage.
- Store the Freezer Bowl in the freezer when not in use.

Troubleshooting

Issue	Likely Cause/Solution
Ice cream is thin	Freezer Bowl not fully frozen; mixture too warm, too sweet, or alcoholic. Refreeze bowl for 24 hours and chill mixture overnight.
Unit stops crushing ice	Safety interlock not engaged or ice jam. Turn OFF and unplug the unit. Clear the Continuous-Feed Chute and Crushing Assembly, reassemble correctly, then resume.
Loud scraping sound	Overfilled Continuous-Feed Chute or foreign object in chute. Turn unit OFF immediately, unplug, and inspect blade area of the Crushing Assembly.
Overflow or leaks	Exceeded capacity or too much liquid. Do not exceed 4 cups of base mixture (yields up to 1½ quarts). Always assemble lid and Mixing Paddle before adding base mixture.
Mix-ins sink to bottom	Mix-ins added too early. Add during the final minutes of churning.

WARRANTY

LIMITED 3-YEAR WARRANTY

We warrant that this Cuisinart product will be free of defects in materials or workmanship under normal home use for 3-year from the date of original purchase. This warranty covers manufacturer's defects including mechanical and electrical defects. It does not cover damage from consumer abuse, unauthorized repairs or modifications, theft, misuse, or damage due to transportation or environmental conditions. Products with removed or altered identification numbers will not be covered.

This warranty is not available to retailers or other commercial purchasers or owners. If your Cuisinart product should prove to be defective within the warranty period, we will repair it or replace it if necessary. For warranty purposes, please register your product online at www.cuisinart.ca to facilitate verification of the date of original purchase and keep your original receipt for the duration of the limited warranty.

This warranty excludes damage caused by accident, misuse or abuse, including damage caused by overheating, and it does not apply to scratches, stains, discolouration or other damage to external or internal surfaces that does not impair the functional utility of the product. This warranty also expressly excludes all incidental or consequential damages.

Your Cuisinart product has been manufactured to the strictest specifications and has been designed for use only in 120 volt outlets and only with authorized accessories and replacement parts. This warranty expressly excludes any defects or damages caused by attempted use of this unit with a converter, as well as use with accessories, replacement parts or repair service other than those authorized by Cuisinart.

If the appliance should become defective within the warranty period, do not return the appliance to the store. Please contact our Customer Service Centre:

Toll-free phone number:

1-800-472-7606

Address:

Cuisinart Canada
100 Conair Parkway, Unit # 1
Woodbridge, ON L4H 0L2

Email:

consumer_Canada@conair.com

Model:

ICE-CMB10C

To facilitate the speed and accuracy of your return, please enclose:

- \$10.00 for shipping and handling of the product (cheque or money order)
 - Return address and phone number
 - Description of the product defect
 - Product date code*/copy of original proof of purchase
 - Any other information pertinent to the product's return
- * The date code format we are using on unit is WWWW, representing week, and year.
eg.2426 = manufactured in 24th week of the year 2026.

Note: We recommend you use a traceable, insured delivery service for added protection. Cuisinart will not be held responsible for in-transit damage or for packages that are not delivered to us.

To order replacement parts or accessories, call our Customer Service Centre at 1-800-472-7606. For more information, please visit our website at www.cuisinart.ca.

©2026 Cuisinart Canada
100 Conair Parkway, Unit #1
Woodbridge, ON L4H 0L2

Printed in China

Consumer Call Centre E-mail:
Consumer_Canada@Conair.com

26CC96964

IB-19086-CAN